mini OMNIA*log*

User Manual

(from FW 0.12.22)

Index

PROVISIONS **4**

DISPOSAL **5**

IDENTIFICATION LABELS
5

miniOMNIAlog OVERVIEW **6**

miniOMNIAlog default setting
7

INSTALLATION PROCEDURE
8

GROUND SYSTEM **9**

HOW TO OPEN miniOMNIAlog CASE
9

miniOMNIAlog POWER SUPPLY
10

Information about Internal Batteries 11

Internal Batteries – Substitution Warnings 13

DISPLAY AND KEYBOARD FUNCTIONALITY
14

State menu (1) 16

Battery menu (2) 17

Firmware update menu (3) 18

Set USB flash driver for miniOMNIAlog firmware update
19

Data copy menu (4) 21

Export file (Measure and Measure log) format
22

Start menu (5) 23

Stop menu (6) 23

Firmware version menu (7) 23

USB connection menu (8) 24

Power off menu (9) 25

Test signal modem menu (A) 25

HOW CONNECT miniOMNIAlog TO PC
26

miniOMNIAlog LOCAL CONNECTION
27

miniOMNIAlog Connection Tool
28

PC-miniOMNIAlog connection 32

Try to install wrong version 36

HOW TO DISCONNECT PC FROM miniOMNIAlog
37

Unplug USB without any disconnection procedure 37

USB CONNECTION BY USB ISOLATOR-CABLE
38

2G (GSM/GPRS) MODEM **39**

SIM card 39

Caution to be taken with 2G (GSM/GPRS) modem 40

APN configuration 41

WEB PAGES FUNCTIONALITY
42

Type of users 43

Web interface language setup 43

WIRING SCHEMES **44**

Local analog sensor 44

Digitalized sensor 45

Wiring 46

RELAY OUTPUT: VOLT-FREE CLOSURE
51

ANOMALIES and ALARM WARNINGS
51

MAINTENANCE
53

TROUBLESHOOTING **54**

F.A.Q **59**

ASSISTANCE **60**

APPENDIX A **61**

HOW TO CHANGE THE HARDWARE AND SOFTWARE CHANNELS CONFIGURATION
62

Firmware configuration
63

One input measure type 64

Two input measure type 65

HARDWARE CONFIGURATION
67

Provisions

- Install OMNIAlog in order to avoid the direct sun radiation.
- The product should not be installed in small places and/or without ventilation, with high humidity levels or in the presence of flammable or explosive liquids. Do not open the box with bad weather conditions (rain, snow etc) or if you want to avoid the entry of humid air.
- miniOMNIAlog was programmed to work at temperatures between -30°C and +60°C (batteries from -20°C to +60°C) and to be conserved at temperatures between -40°C e +85°C (batteries from 0°C to + 40°C). Too extreme temperatures can temporarily shorten batteries lifetime or cause the temporary malfunctioning of miniOMNIAlog.
- After tightening the cable glands, consider to seal accurately the instrumental cables (with silicone or expanded lather) to guarantee the correct degree of protection of the box.
- Electrical connections must be done by a qualified technician, respecting the current regulations.
- Before doing works, verify that all connections (also the ones free from potential) are voltage-free. Maintenance works have to be done only by qualified technicians.
- Periodically verify the voltage of the external battery: in case of a value inferior to 11.5Vdc, consider the substitution of the battery and check on the causes. Anyway, battery has to be substituted after 5 years. If, for every reasons, the battery capacity descends under 50%, consider its immediate substitution.
- Periodically verify the voltage of batteries in batteries-holder: in case of a value inferior to 8.4V consider the substitution of the battery and check on the causes
- Avoid any activity that can put the battery poles in short-circuit.
- The use of non-original SISGEO spare parts can cause abnormal functioning and dangers for people and things.
- Supplied equipments and devices are not suitable to be installed in potentially dangerous areas or in areas where the use of explosion-proof components is prescribed. In potentially explosive areas it is necessary to shut down miniOMNIAlog. Possible sparks could cause explosions or fires, causing serious injuries or even death. Generally, areas with a potentially explosive atmospehere are signalled.
- Consider the periodic substitution of bags of hygroscopic salts.
- miniOMNIAlog contains fragile parts and components.
- Do not drop, disassemble, press or deform miniOMNIAlog.
- Do not use miniOMNIAlog if it is damaged.
- The lack of respect for this behavior could damage the installed equipment.

DISPOSAL

The disused devices has to be disposed of in accordance with the European directive 2002/96/CE. Recycable materials contained in the device will be recuperated to avoid the environmental degradation. For further information, adress to the local disposal authorithy or to device seller.

miniOMNIAlog contains electronic components and batteries that have to be disposed of separately from domestic waste.

When this product reach its useful life, it is necessary to bring it to a gathering place for the recycling of electronical components. An uncorrected disposal on the part of the user could be subject to penalties.

IDENTIFICATION LABELS

Every miniOMNIAlog datalogger, from now on indicated simply as “miniOMNIAlog” or “datalogger” has two type of identification labels.The first label, placed on the upper side of miniOMNIAlog, shows the registration Serial Number of the product.

It is important to communicate these data in case of request of information or accessories concerning the product.

The second label, placed on the back side of miniOMNIAlog, shows information about the electrical equipment of the product.

Respect the requirements written on the label. The lack of respect for these requirements could damage the product or put in danger the operator.

miniOMNIAlog OVERVIEW

"miniOMNIAlog" is a 4 channel datalogger designed for low power consumption and easy installation; it reads most analog (current, voltage, NTC, Wheathstone bridge), vibrating wire and digital sensors. Each channel is individually configured at factory. Readings are accurate, repeatable and stable in temperature. VW sensors are read using an algorithm based on Fast Fourier Transform; a parameter, logged together with the reading, shows the quality of the readings. Readings are stored into the internal memory and can be downloaded using a USB pen drive or a laptop/PC. If the mini OMNIAlog is equipped with the GPRS module, readings can be automatically transmitted to the user FTP folder or by email.

No software needs to be installed: you simply connect the PC to the USB port and establish a dial-up PPP connection. Using an internet browser, the user could configure the miniOMNIAlog and download data; the miniOMNIAlog is fully configurable: for each channel it is possible to set the acquisition time, the conversion parameters and the alarm method (SMS, email, digital output, frequency increasing).

It is possible to update the firmware / web pages using the USB pen drive.

miniOMNIAlog does not support a Dial-UP M2M remote communication.

NOTE: Power supply type (internal batteries or external power supply), the measure type of each analog channel (current, voltage, NTC, Wheatstone bridge, vibrating wire) and the present of the GPRS module are configured at factory. The user is not authorized to modify these settings.

miniOMNIAlog default setting

miniOMNIAlog utilizes the following IP address for USB connection with the PC:

IP Address: **192.168.125.1**

NOTE: this IP address cannot be changed by the user because it is configured at factory. This IP could be utilized only to use the web server on USB communication.

After the connection miniOMNIAlog asks for the access credentials.

NOTES:

- **miniOMNIAlog is compatible with the main internet browsers (FireFox, IE9, Safari, Chrome). SISGEO recommends the use of FireFox to manage miniOMNIAlog;**
- **First page upload can take some time.**

Following there are the default credentials:

User "Admin"

User: Admin

Psw: Admin

User "User"

User: User

Psw: User

INSTALLATION PROCEDURE

You can use the four holes Ø 6mm to fix the miniOMNIAlog according to your application. Screws and anchor plugs (suggested Ø 5mm) are not supplied.

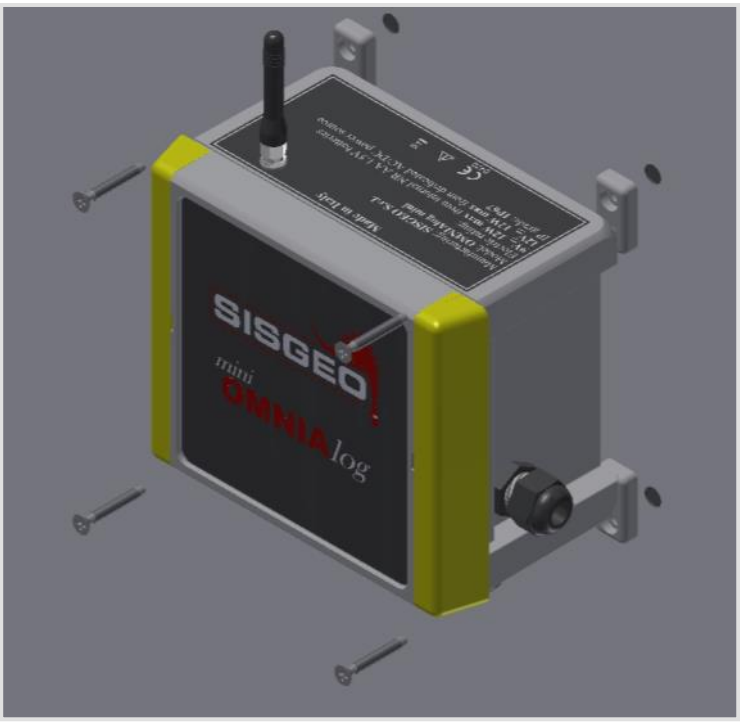

GROUND SYSTEM

The protections integrated in the miniOMNIAlog system work correctly only if connected to the ground. Use an appropriate green-yellow conductor to connect the plug to the ground as shown below. The ground system must be designed, manufactured and certified according to the rules and laws in force.

HOW to OPEN miniOMNIAlog Case

To open the miniOMNIAlog case use a little screwdriver, insert the screwdriver into the hole in the yellow plastic and press down to unlock the case.

miniOMNIAlog POWER SUPPLY

miniOMNIAlog is powered by:

- 6 AA non-rechargeable batteries or
- an external power supply (i.e. solar panel).

Here below are shown the clamps where the power supply is connected. Respect the polarity.

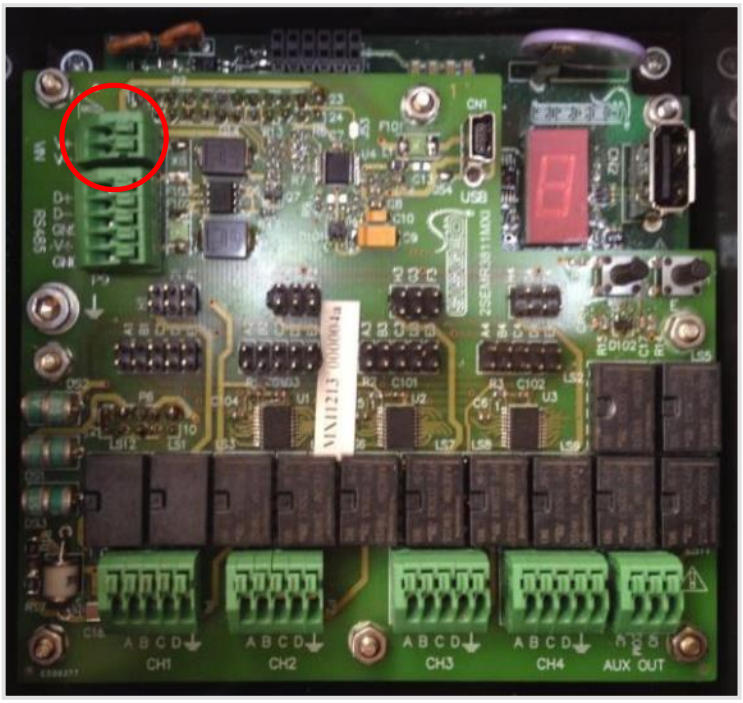

To preserve batteries life, during PC connection the power supply is automatically taken from the PC through USB cable connection. In any case, it is necessary to connect to a power supply.

NOTE: the maximum current permitted on the mini USB connector is 500mA. This current limitation must be taken into account when you are powering this device, for example it is not possible to turn on the 2G (GSM/GPRS) modem when the USB cable is connected to the PC

SYSTEM POWER REQUIREMENTS

Voltage: 9 to 14 V DC (reverse polarity protected), max 12W

External rechargeable battery (i.e. from a little solar panel system): 12V DC nominal

In case of external power supply, the external power source must be separated from the parts in dangerous voltage with a double insulation and must guarantee an insulation of at least 3000Vrms. An external switch, appropriately labeled, has to be integrated into the plant for power disconnection.

The power cable used must have a section of at least 0.5mmq and a rating of 70°C.

Internal non-rechargeable batteries (no external power supply): 6 batteries size AA, chemistry Lithium/ Iron disulfide (Life s2), nominal voltage 1.5 V, min 2 A continuous current discharge, min 2 A pulse

capability, min 3 Ah capacity

Information about Internal Batteries

Lithium iron disulfide (LiFeS2) batteries have a much lower sensitivity to temperature compared to other chemical systems. The recommended operating temperature range is -40°C to +60°C (-40°F to +140°F).

As with all battery systems, service life is reduced as the discharge temperature is lowered below room temperature. Batteries generate power through chemical reactions and these typically run much more slowly at lower temperatures. However, even at -40°C, LiFeS2 batteries perform well at the rating drain 200mA.

LiFeS2 batteries can deliver approximately full rated capacity at -40°C if they are discharged at 25mA.

Thus, at these rates, batteries give comparable performances over the entire 100°C operating range.

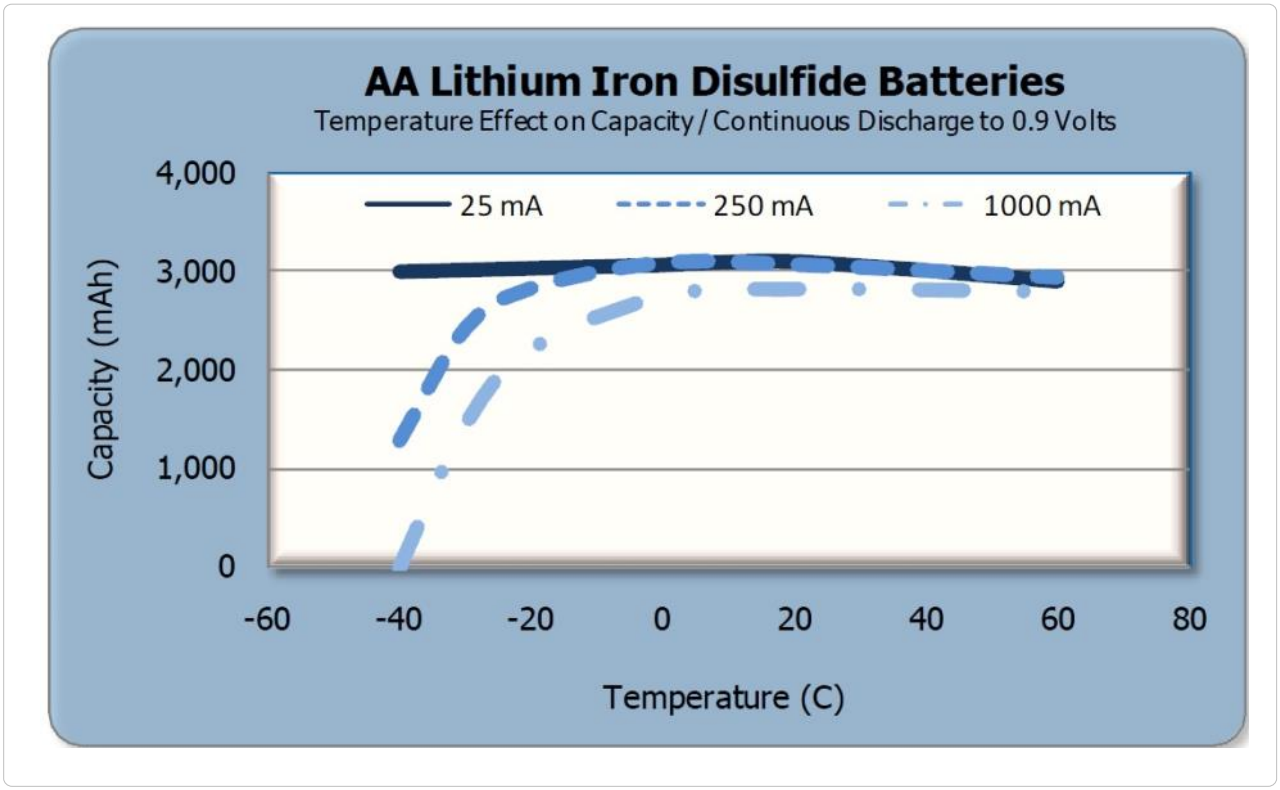

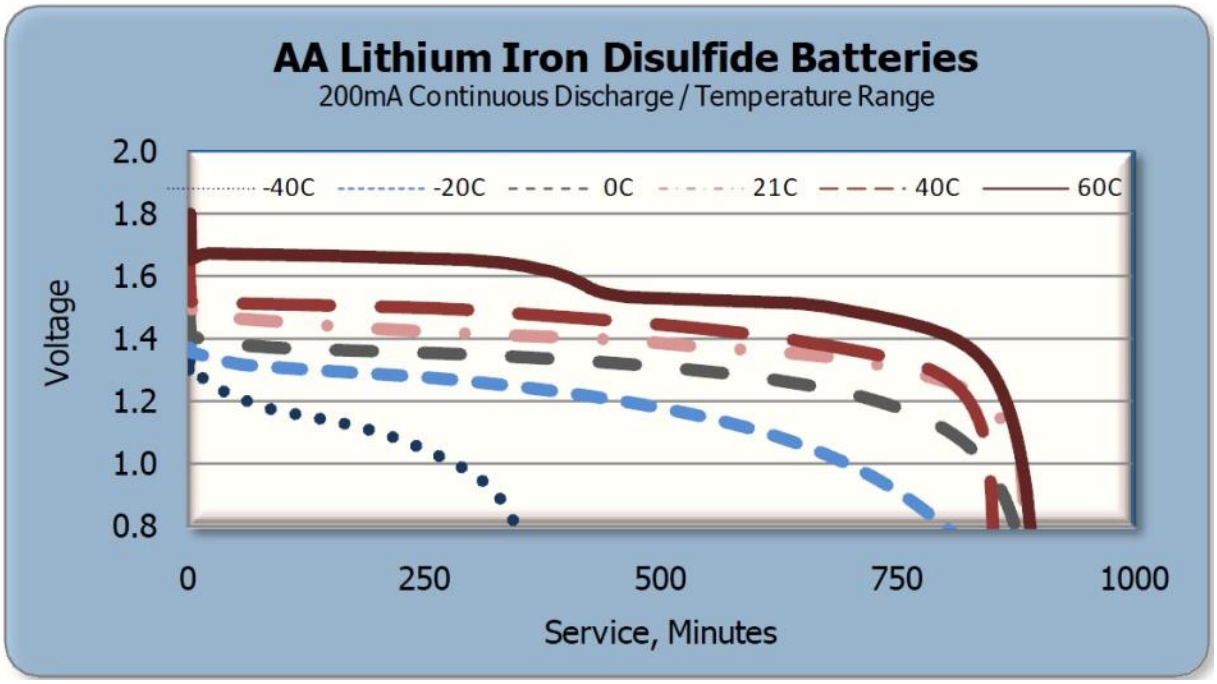
AA Lithium Iron Disulfide Batteries
200mA Continuous Discharge / Temperature Range
-40C
-20C
0C
21C
40C
60C
Voltage
2.0
1.8
1.6
1.4
1.2
1.0
0.8
0
250
500
750
1000
Service, Minutes

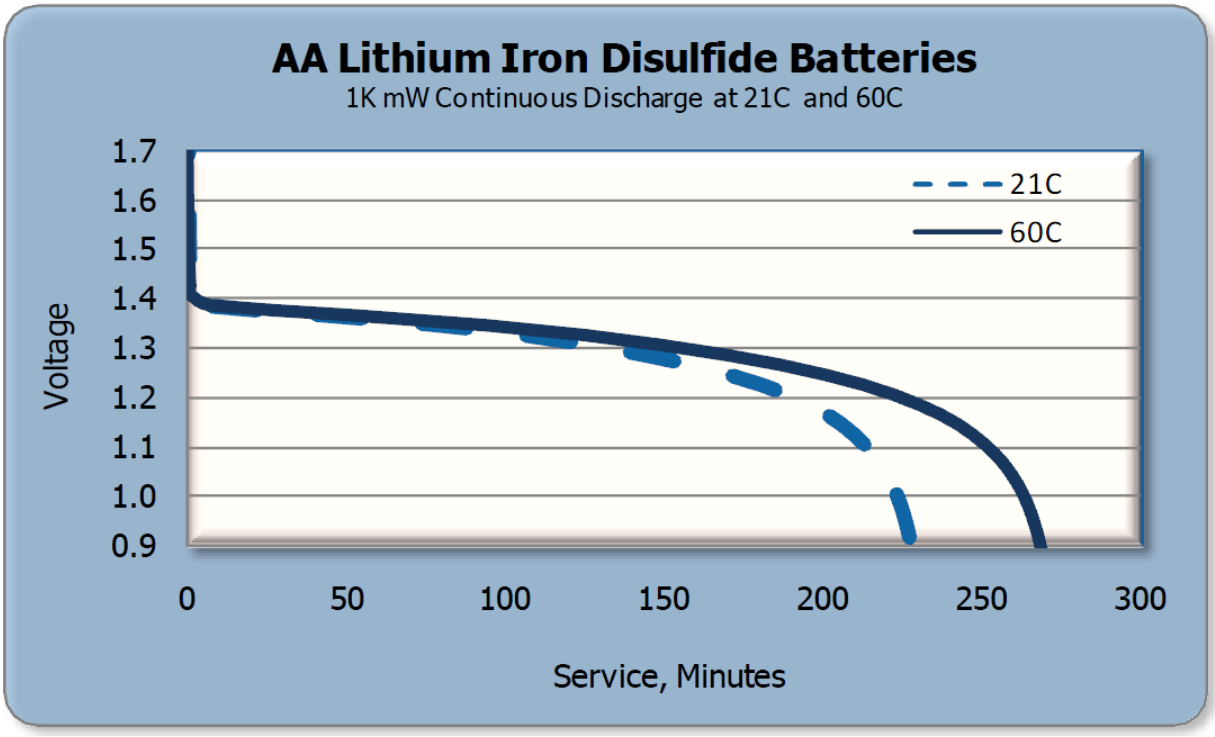
AA Lithium Iron Disulfide Batteries
1K mW Continuous Discharge at 21C and 60C
21C
60C
Voltage
1.7
1.6
1.5
1.4
1.3
1.2
1.1
1.0
0.9
0
50
100
150
200
250
300
Service, Minutes

Internal Batteries – substitution warning

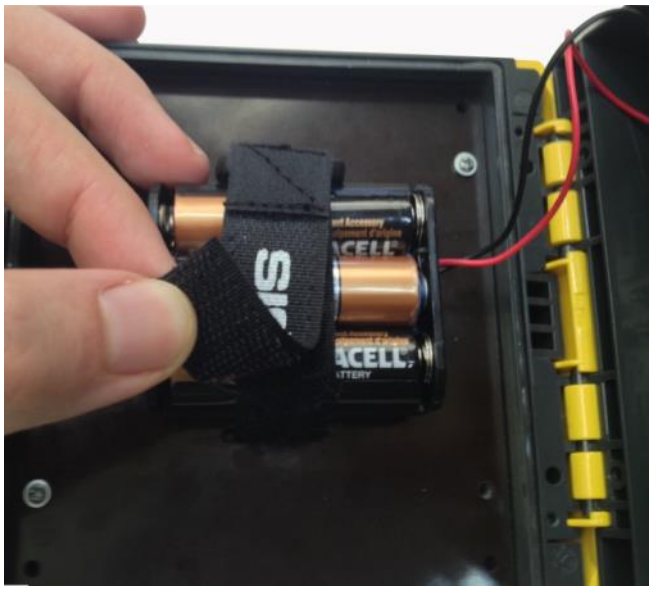

- Insert batteries in the batteries-holder, making sure of the correspondence between the polarities of battery and those of batteries-holder. Batteries that are inserted incorrectly could create a short-circuit;

- Do not recharge non-rechargeable batteries;
- Do not mix used batteries with the new ones or with batteries of different brand/model;
- Expired batteries have to be removed immediately from the batteries-holder and correctly disposed of (according to what was established by local rules): if batteries are left in the batteries-holder, some losses could happen and these could damage the miniOMNIAlog.

DISPLAY AND KEYBOARD FUNCTIONALITY

miniOMNIAlog is provided with a 7-segment display and 2 input keys (Select/Enter). The display is started by pressing down one of the 2 keys. You can scroll the menu using Select key. If the user doesn't send any input in a time equal to Timeout Display (configured in "Energy Management" web page), the display will turn off and the miniOMNIAlog will return in Sleep state.

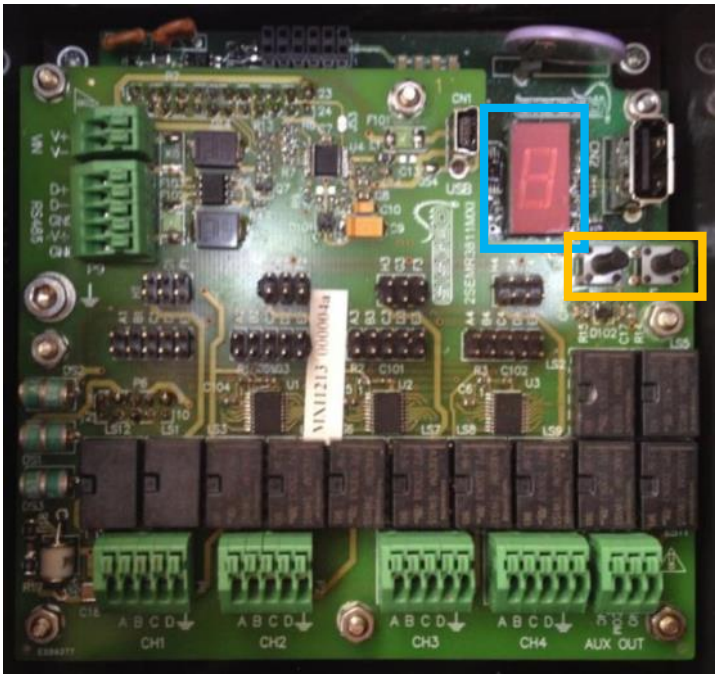

- 7-SEGMENT DISPLAY
- KEYBOARD

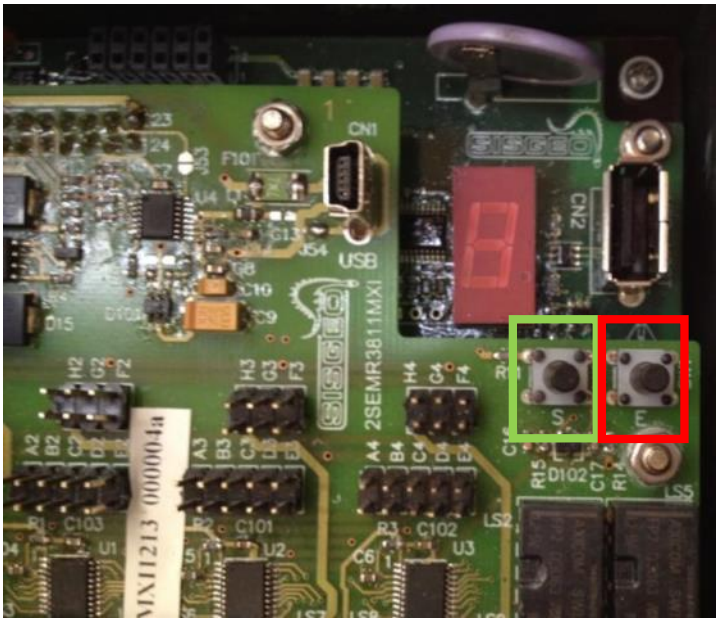

- SELECT KEY
- ENTER KEY

This is the chart of states on display.

Item Menu	Display Code	Description
Test signal modem	A	Tests and shows the 2G (GSM/GPRS) modem signal from “0” to “3”
State	1	It shows miniOMNIAlog state.
Battery	2	It shows battery state.
Firmware update	3	It allows miniOMNIAlog firmware updating.
Copy Data	4	It copies logs on USB drive.
Start	5	It starts the miniOMNIAlog.
Stop	6	It stops the miniOMNIAlog.
Firmware Ver.	7	It shows the firmware version.
USB Connection	8	It enables the miniOMNIAlog to PC connection.
Power Off	9	it permit to power off miniOMNIAlog properly

This chapter summarizes the general philosophy of display messages, as follows;

1. each code is univocal; so, for example, **1** always identifies the miniOMNIAlog STATE menu;
2. letter **A** is used as a message of successful operation
3. letter **E** followed by a number means an error in operations;
4. when sleep state is on, the display is off;
5. to awake the system up, you have to press a key. To turn on the system, you have to press the key a second time: now miniOMNIAlog is totally on and displays the first entry of the main menu.

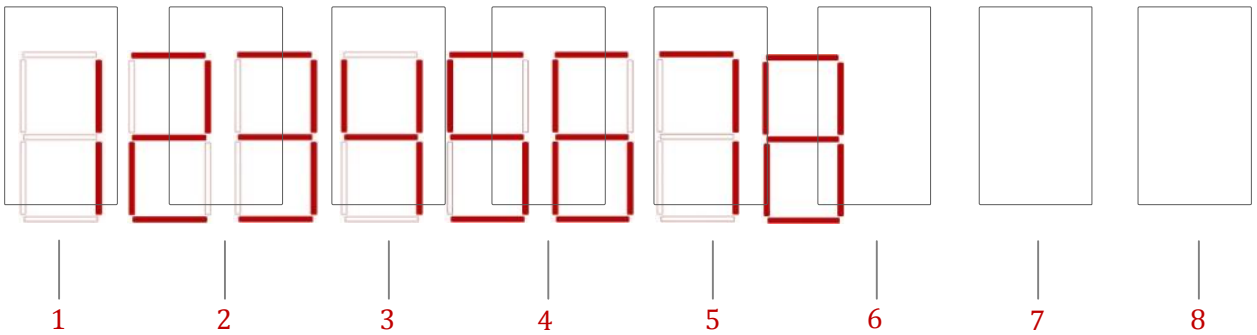

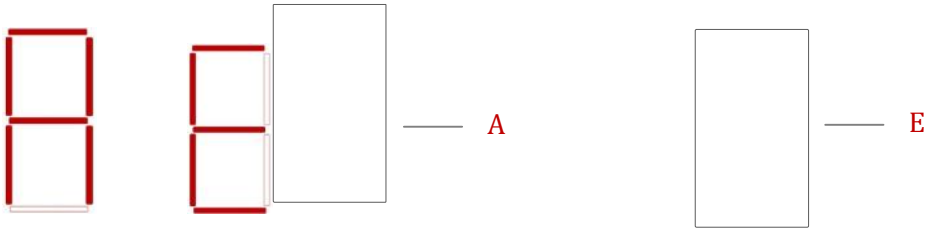

State Menu (1)

If you press **Enter key** in correspondence to the **miniOMNIAlog state menu (1)** entry , the miniOMNIAlog will display the current state.

MiniOMNIAlog state	Display code	Description
RUN	r	miniOMNIAlog in run.
CONFIG	c	miniOMNIAlog in configuration
STOP	S.	miniOMNIAlog in stop.

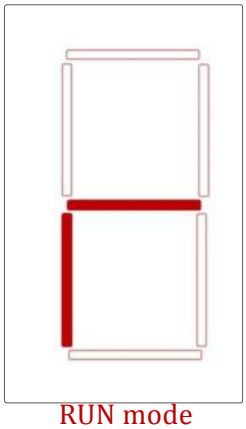

RUN mode

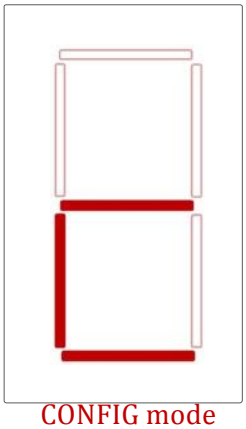

CONFIG mode

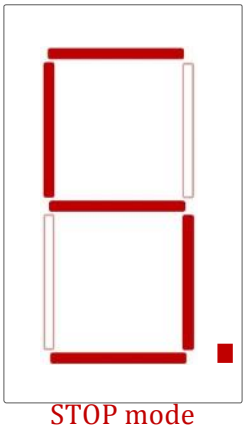

STOP mode

The user can read the miniOMNIAlog state when he enters the menu.

As the user enters the "miniOMNIAlog state", a 15 sec timeout begins. After that, the miniOMNIAlog will come back to main menu and will start the timeout display. At timeout display expiration, the display will turn off.

While the menu shows the display state, **Select key** causes the display returning back to main menu (and timeout reset display).

Battery Menu (2)

If you press **Enter key** in correspondence to the **Battery menu entry (2),** the miniOMNIAlog will display the batteries charge state.

Here follows the battery levels code scheme:

Battery level	Display Code	Description
Low	___	Battery under 30%
Medium	___ ___	Battery 50%
High	___ ___ ___	Battery 100%

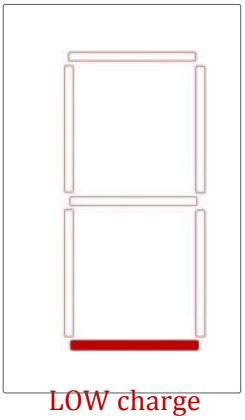

LOW charge

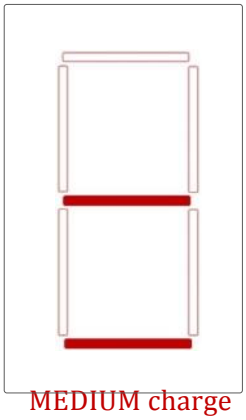

MEDIUM charge

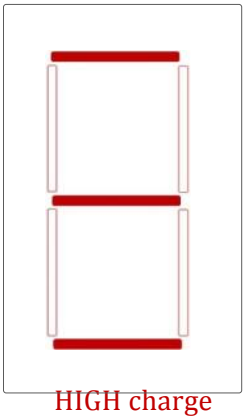

HIGH charge

The user can read the miniOMNIAlog state when he enters the menu.

As soon as the user enters the battery state, a 15 sec timeout starts. After that, the miniOMNIAlog will come back to main menu and will start the timeout display (it can be set up from the internet). At timeout display expiration, the display will turn off.

While the menu shows the display state, **Select key** causes the display returning back to main menu (and timeout reset display).

NOTE: if the miniOMNIAlog has an external power supply, battery state will **L** or **not important in case of external power supply**

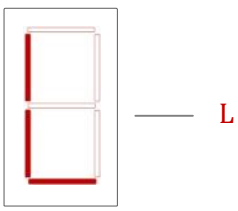

Firmware updating menu (3)

NOTE: miniOMNIAlog should be in "Stop" or "Config" state before using this function.

If you press **Enter key** in correspondence to the menu entry **Firmware updating (3)**, the miniOMNIAlog will run the web and firmware updating from USB flash drive. This menu is different from the others, as updating needs a restart and systems management that are different from standard operations.

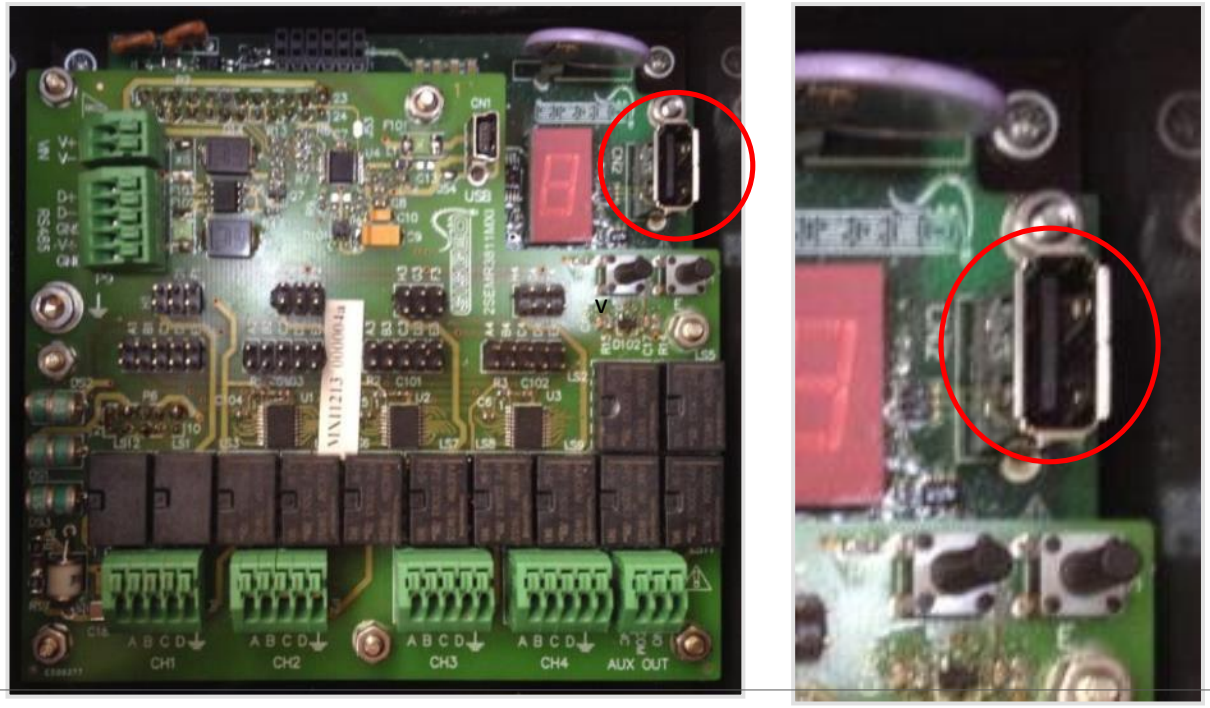

Flashing **d** letter is shown on display during files copy. At the end of files copy, the miniOMNIAlog:

1. shows error if USB flash drive was not found and waits for timeout display or **Select key** to go back to main menu
2. shows error if files copy failed for a time equal to timeout and then resets. After reset, the miniOMNIAlog will go to its normal state
3. resets and starts bootloader for firmware updating if files copy was successful (flashing **b** letter will appear during firmware reprogramming). After firmware updating, two things can happen:
   I. firmware updating was successful, letter **A** is showed for a time equal to timeout and after that miniOMNIAlog goes to the normal state
   II. firmware updating failed, the miniOMNIAlog restores old versions from web and resets (letter **E** is showed for 15 sec.)

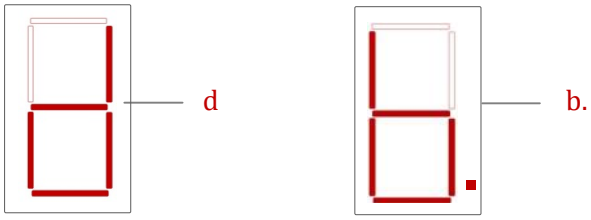

NOTE: after firmware update, to communicate with miniOMNIAlog, you have to unplug and re-plug the power supply.

Set USB flash drive for miniOMNIAlog firmware update

SISGEO strongly recommends to keep miniOMNIAlog updated to the last firmware version available to ensure the best performances, to solve any bugs or to implement any improvements and to exploit miniOMNIAlog possibilities.

NOTE: the code structure (x.yy.zz) of the firmware version is modified according to the improvement/corrections importance carried out between two versions. When the value "x" is modified, it means that the improvement/modification is of high importance because it changes data structure. In this case you need to proceed as explained in chapter "Update with database structure modification".

A. CHECK NEW FIRMWARE AVAILABILITY

To check for any firmware update you have two possibilities:

- Automatic check (only with miniOMNIAlog connected to internet) –COMING SOON--
- Manual check on SISGEO website (www.sisgeo.com)

Automatic check happens only when miniOMNIAlog is connected to internet through internal 2G (GSM/GPRS) modem.

miniOMNIAlog is programmed to check every 7 days for any new firmware version. When a new version is found, the status icon will become red. The user, through miniOMNIAlog web pages, will be informed that on SISGEO website a new version is available. This new version must be downloaded to proceed with the update.

New firmware available icon

No new firmware available icon

It is possible to check anytime for new firmware on SISGEO website.

B. NEW FIRMWARE DOWNLOAD

For both possibilities, the download must be performed manually on a PC connected to internet:

- Connect to SISGEO website and, in the page PRODUCTS, choose "Readout Units and Dataloggers";
- Select "miniOMNIAlog datalogger" from the list;
- In the right higher part select "Download Firmware": the download of the .zip file will start;
- Once the download ends, you will have on the PC a file called "FW x.yy.zz" (where "x" is the major release, "yy" is the web pages version and "zz" is the firmware version);
- It is necessary to extract the .zip file content in the main directory of an USB flash-drive (SISGEO supplies, with miniOMNIAlog, a 4GB pen-drive already FAT32 formatted and suitable for miniOMNIAlog reading); the USB pen drive can include other files.

In case of problems during the firmware download from SISGEO website or temporary unavailability.

It is possible to request the new firmware version contacting SISGEO assistance at : assistance@sisgeo.com.

Notes and remarks:

1) The USB flash-drive used for the firmware update must be FAT32 formatted. Otherwise the pen drive will not be read from miniOMNIAlog and it will be impossible to update the firmware.
2) It is necessary to copy the whole content of the ZIP file (WEB folders, FW and Restore) directly in the main directory of the USB pen-drive, do not use sub-folders.

NOTE: SISGEO suggests to use a USB flash-drive only for this purpose in order to avoid any unexpected data loss.

C. FIRMWARE UPDATE

According to the value modified in the firmware version (x.yy.zz), it is necessary to proceed in different ways.

You have two different options:

- Update without database structure modification – "x" value doesn't change, while values "yy" and/or "zz" change.
- Update with database structure modification - Value "x" changes.

In case of "Update with database structure modification" the old configuration is not compatible with the new version of firmware.

Also the log files (Measures, Events and Alarms) must be deleted after firmware update. If these logs are not deleted, there is the possibility to obtain wrong .CSV files after the first download.

Data Copy Menu (4)

NOTE: miniOMNIAlog should be in "Stop" or "Config" state before using this function.

If you press **Enter key** in correspondence to the menu entry **Data Copy (4),** the miniOMNIAlog copies all logs on USB Drive. Flashing letter **d** is displayed during files copy. At the end of the copy, flashing number **. (dot)** will be shown to indicate to the user to remove USB flash drive and, after that, letter **A** if copy was successful. If an error occurred, the system will go to error state and an error code will be shown.

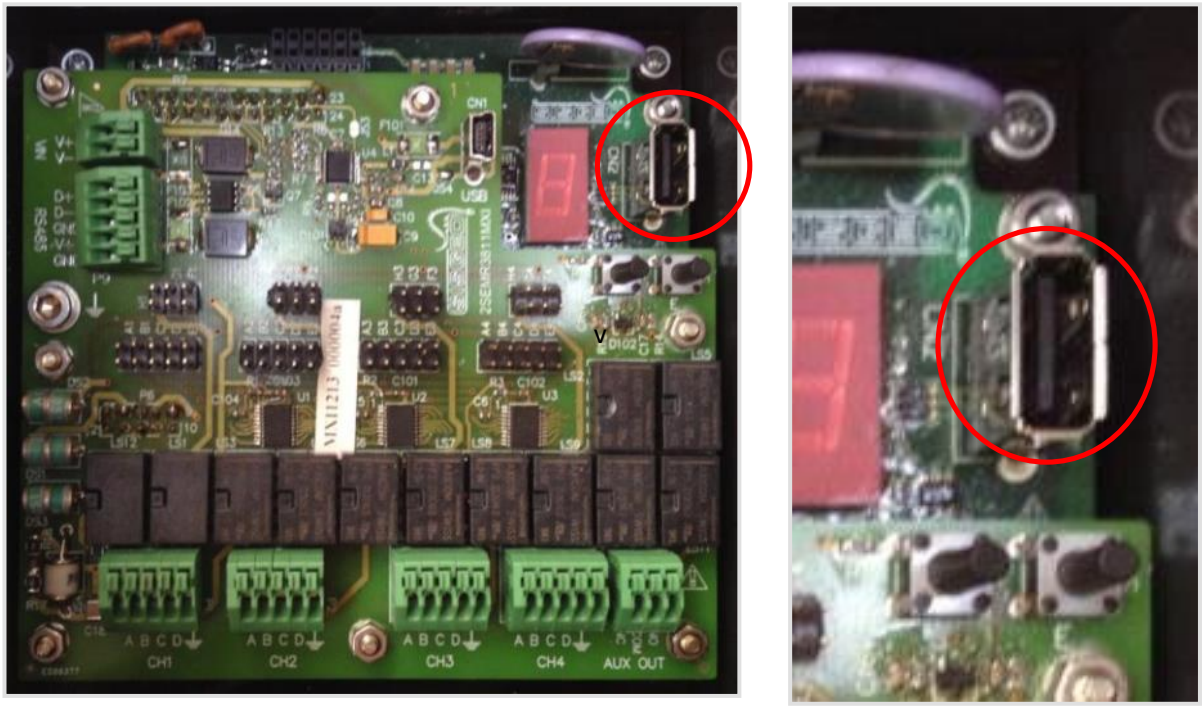

WARNING: it is not possible to connect USB hard drives to this port because these devices need too much current to work correctly. In addition, it is not possible to connect to this port any device different from flash drive (i.e. Bluetooth key, internet key, ect.)

At copy process completed, a 15 sec timeout starts. After that, the miniOMNIAlog will come back to main menu and will start the timeout display (it can be set up from the web). At timeout display expiration, the display will turn off.

While the menu shows the copy state (error code or OK), **Select key** causes the display back to main menu (and timeout reset display).

While the menu shows the copy result, **Enter key** causes the timeout reset from 15 sec.

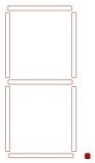

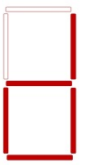

. - dot

d

Export File (Measure and Measure Log) Format

With miniOMNIAlog you can download data (measures, events log, alarms logs) using:

- an **USB flash drive**
- a **PC** (through web interface)
- a **FTP** or **e-mail**

A. USB flash Drive

After the copy using a **USB flash drive**, a folder with the following format will be automatically created:

<miniOMNIAlogname>Log

Within the folder there will be the following four ".csv" files:

- **ALog_dd_mm_yy.csv**: in this file there are all the alarms detected from the miniOMNIAlog;
- **ELog_dd_mm_yy.csv**: in this file the events recorded from the miniOMNIAlog are saved;
- **MLog_dd_mm_yy.csv**: in this file the measures in log format are saved. There are also other information such as any alarm for the sensors, the measurements unit, the vibrating wire measurements parameters, etc.;
- **MLog_dd_mm_yy.Column.csv**: in this file the measures ordered in columns are saved. This kind of display is suited for data management with spreadsheet.

In the file name **dd** is the day, **mm** is the month and **yy** is the year.

B. PC

When you download data directly from the miniOMNIAlog web pages (there is a specific field for each data file) you can choose the destination folder on your PC and the file name if your Internet browser is well configured.

C. FTP or e-mail

If you set the miniOMNIAlog to transmit the .csv reading file (only the one ordered in columns) by e-mail or by FTP, the name of the file is the following:

mLog_dd_mm_yy__hh_mm.csv

In the file name **hh** is the hour, **mm** is the minute.

Start Menu (5)

If you press **Enter key** in correspondence to the menu entry **Start miniOMNIAlog (5),** the miniOMNIAlog will start acquisitions.

Letter **A** is displayed if the miniOMNIAlog is successfully started; if an error has occurred the system will go to error state and an error code will be shown.

After starting result is shown, a 15 sec timeout is started. After that, the miniOMNIAlog will come back to main menu and will start the timeout display. At timeout display expiration, the display will turn off.

While the menu shows the start state (error code or OK), **Select key** causes the display returning back to main menu (and timeout reset display).

Stop Menu (6)

If you press **Enter key** in correspondence to the menu entry **Stop miniOMNIAlog (6)**, the miniOMNIAlog will stop acquisitions.

Number **8** followed by letter **A** are displayed if the operation is successful; if an error has occurred the system will go to error state and an error code will be shown.

After stop result is shown, a 15 sec timeout is started. After that, the miniOMNIAlog will come back to main menu and will start the timeout display. At timeout display expiration, the display will turn off.

While the menu shows the stop state (error code or OK), **Select key** causes the display returning back to main menu (and timeout reset display).

Firmware version Menu (7)

If you press Enter key in correspondence to the menu entry **Firmware Version (7),** the miniOMNIAlog will show the installed firmware version.

Firmware version is displayed like the string **F-X-X-.-X-X-.-X-X** only once. After that, the menu goes back to main menu.

USB connection Menu (8)

If you press **Enter key** in correspondence to the menu entry **Usb connection (8)**, the miniOMNIAlog will show the letter **A** and then the flashing number **0** to indicate to the user that PC connection can be started (time for connection is 30 sec., and after that the miniOMNIAlog goes back to main menu).

As connection is on, the flashing number **0** becomes permanent. The user can now use the miniOMNIAlog by PC.

NOTE: As the user removes the miniOMNIAlog from PC (so he removes remote PC connection), the display goes back to connection state (flashing "0") for 40 sec., and during this time the user could reconnect. After 40 sec it goes back to main menu.

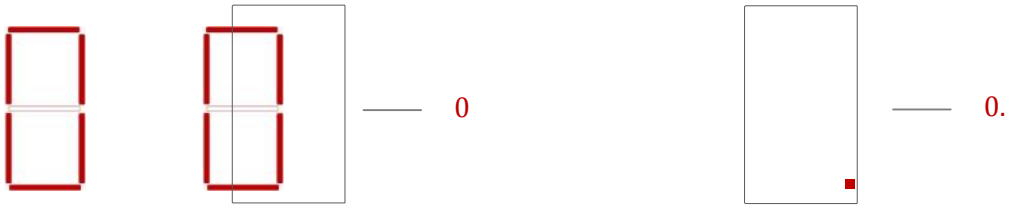

Power off Menu (9)

Pressing **Enter key** in **Power off (9) menu**, the miniOMNIAlog shows the character **"."**
Now it is possible to remove the power supply (internal batteries or external power supply).

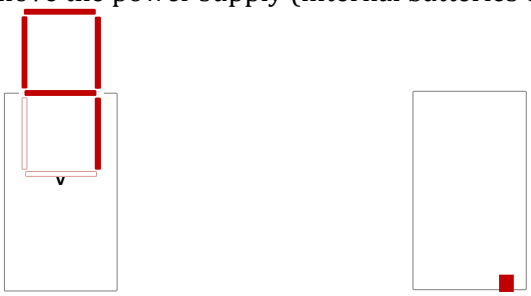

9 .

NOTE: the miniOMNIAlog could be powered off only if it is in STOP mode (see "Stop Menu (6)" section in this manual)

Test signal modem Menu (A)

Pressing **Enter key** in **Test signal modem menu entry (A)**, the miniOMNIAlog shows a blinking "A" and after, it displays a number from 0 to 3.

This value indicates the quality of signal:

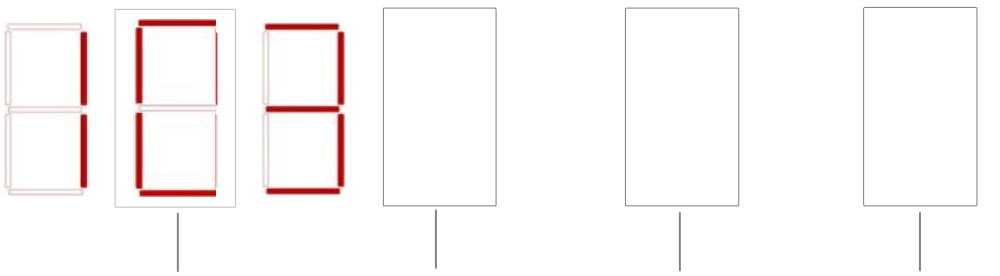

0 –No signal/Bad 1 – Low signal 2 – Good signal 3 - Excellent

If you select this function without the presence of the internal modem, an **error (E7**) appears on the display:

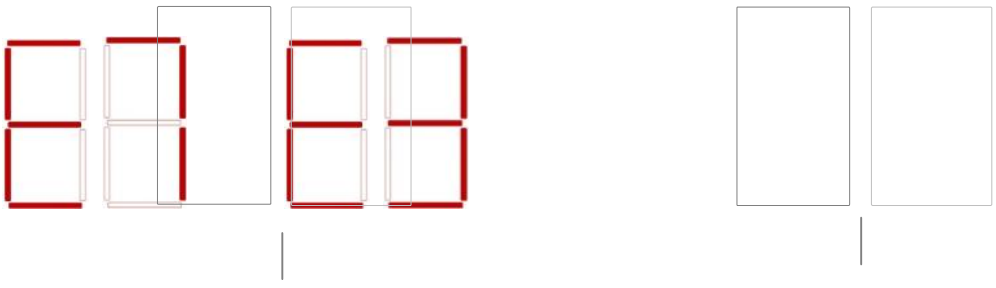

E3

E7

NOTE: miniOMNIAlog has to be in "STOP" or "CONFIG" mode before using this function. Otherwise miniOMNIAlog shows error E3.

How connect miniOMNIAlog to PC

The miniOMNIAlog can be found in:

- **RUN mode**: stand-by (miniOMNIAlog timed), waiting for an acquisition.
- **CONFIG mode**
- **STOP mode**
- **ERROR state**

Connect the PC trough the USB cable to the miniUSB port of miniOMNIAlog. From this moment and as long as the USB cable is disconnected, the power supply will be taken from the PC.

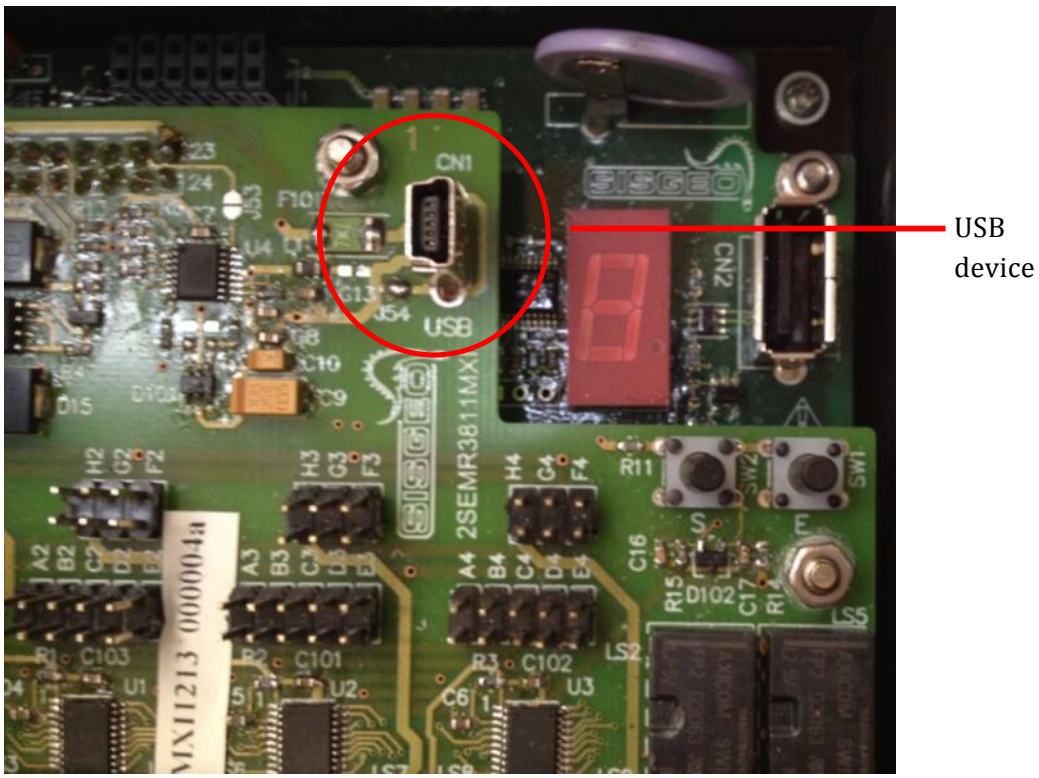

1. Select item **8** from display menu and click enter.
2. Letter **A** will appear on display, meaning that the miniOMNIAlog is correctly set up in STOP state.
3. After that, flashing number **0** will appear on display meaning that the miniOMNIAlog is waiting for a connection. The miniOMNIAlog waits for connection for 30 sec. After 30 sec., you should repeat connection procedure from point 1 to start a connection.
4. Start PC connection by clicking on connect button in the connection window (see the par. miniOMNIAlog local connection).
5. After connection, number **0.** will appear on display.
6. Open Browser and enter address **192.168.125.1**
7. Enter miniOMNIAlog **Username** and **Password**. (see the par. "miniOMNIAlog default setting")
8. Now it is possible to surf the configuration pages

miniOMNIAlog LOCAL CONNECTION

To establish a connection through Dial-up call with a PC follow the next steps:

1. Install the USB driver (FTDI driver);
2. Run **miniOMNIAlog Connection Tool** to create the virtual 56000 bps modem and to create the dial-up connection;
3. miniOMNIAlog setup.

To communicate with miniOMNIAlog by USB connection a small driver (FTDI Driver) is needed, to permit to the PC to recognize the miniOMNIAlog.

Usually, if your PC is already connected to the internet when you connect miniOMNIAlog, Microsoft Windows is able to download and install this driver automatically. If Microsoft Windows does not install the driver automatically or your PC is not connected to the internet, you can download the driver for free at the following link:

http://www.ftdichip.com/Drivers/VCP.htm

You have to do this operation only one time for each PC utilized with miniOMNIAlog. After that, every time a new miniOMNIAlog is connected to these PCs, it will be automatically recognized because the driver is already installed on your PC.

SISGEO suggests to check periodically the new releases of driver at the previous link.

miniOMNIAlog Connection Tool

The tool for the creation of the dial-up remote connection is in folder **miniOMNIAlog Connection Tool**, that you could find in the USB flash drive supplied together with the datalogger. You could download it also in SISGEO website, in the page of the product. This tool allows to create the dial-up remote connection and to add the virtual modem 56000bps automatically. The tool is necessary only the first time you connect miniOMNIAlog to the PC or every time a new miniOMNIAlog is connected to the PC.

System minimum requirements

The tool is compatible with the following Microsoft operating systems:

- Windows 7 32bit and 64bit
- Windows 8 32bit and 64bit

No particular hardware resources are required. Instead, it is necessary to have administrative rights in order to execute the software.

Installation

To install the tool, do as follows:

1. Enter in folder "miniOMNIAlog Connect Tool". Two folders are displayed.

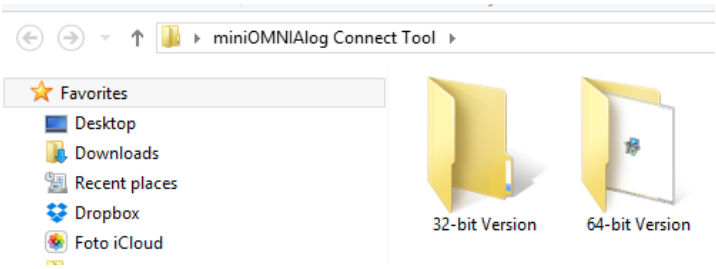

2. According to the version of your Operative System (32 bit or 64bit), enter in the respective folder.
3. Inside the folder, do a double click on the executable file **miniOMNIAlogConnectSetup.exe**
   NOTE: it is necessary to be administrator to start the installation
4. The tool installation starts. In the following display, click on **Next**

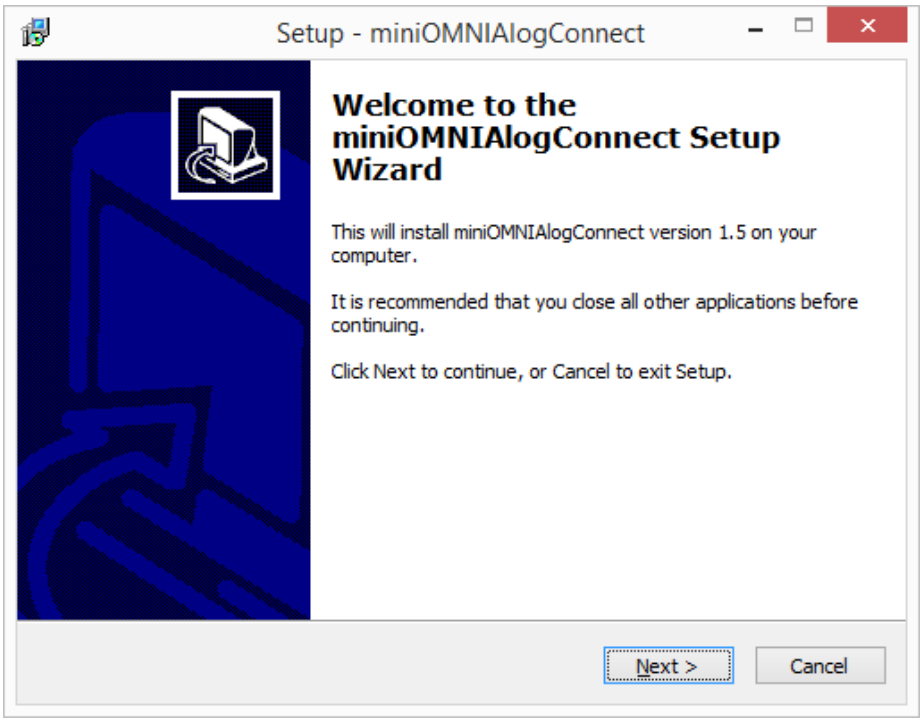
Setup - miniOMNIAlogConnect
Welcome to the miniOMNIAlogConnect Setup Wizard
This will install miniOMNIAlogConnect version 1.5 on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

5. Indicate the path in which extract the files. You could use the one of default. Once you selected the path, click on **Next.**

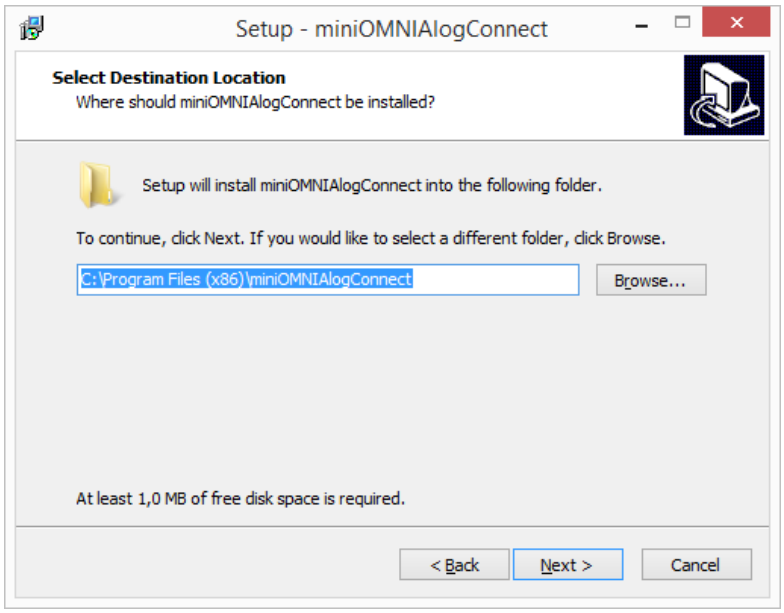
Setup - miniOMNIAlogConnect
Select Destination Location
Where should miniOMNIAlogConnect be installed?
Setup will install miniOMNIAlogConnect into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files (x86)\miniOMNIAlogConnect
Browse...
At least 1,0 MB of free disk space is required.
< Back
Next >
Cancel

6. Select the name of the folder you want to add to the **START** menu and push **NEXT**

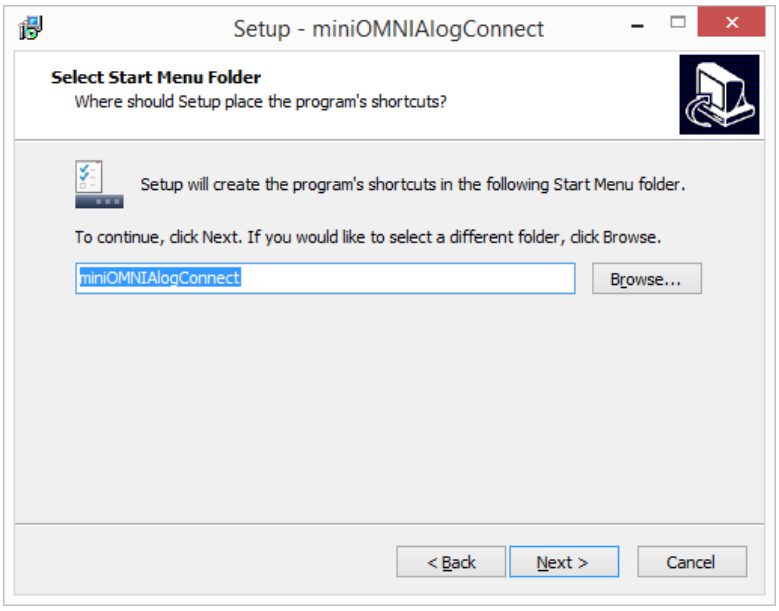
Setup - miniOMNIAlogConnect
Select Start Menu Folder
Where should Setup place the program's shortcuts?
Setup will create the program's shortcuts in the following Start Menu folder.
To continue, click Next. If you would like to select a different folder, click Browse.
miniOMNIAlogConnect
Browse...
< Back
Next >
Cancel

7. In summary page, click on **INSTALL**

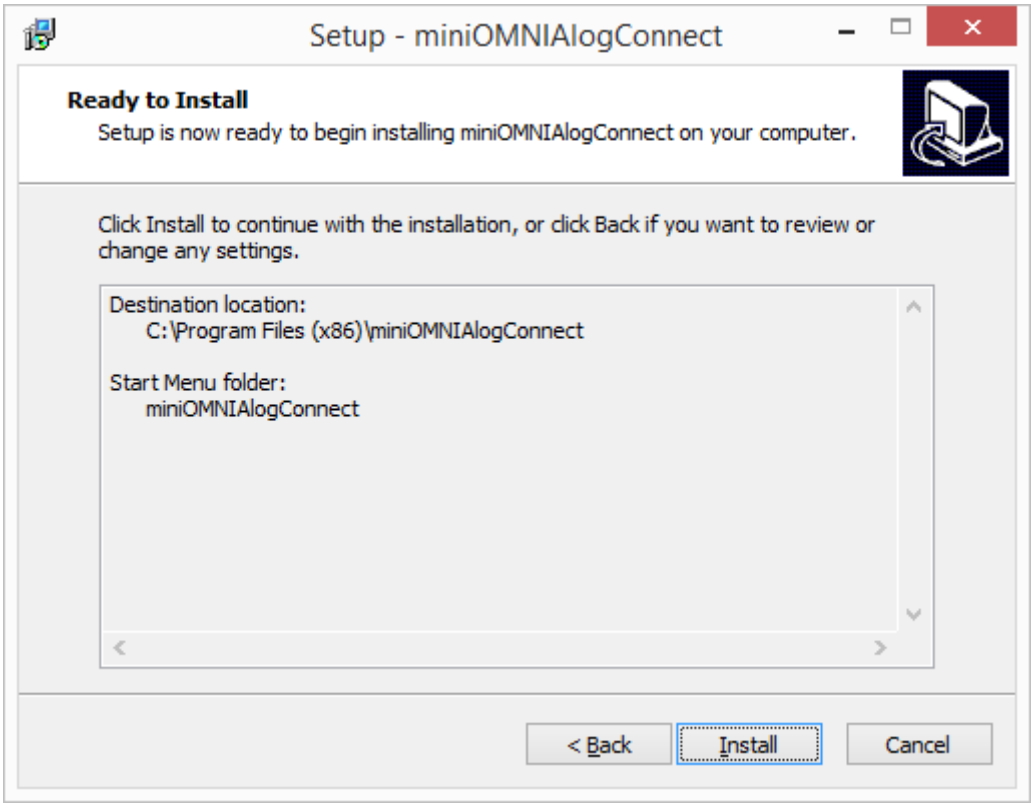
Setup - miniOMNIAlogConnect
Ready to Install
Setup is now ready to begin installing miniOMNIAlogConnect on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\Program Files (x86)\miniOMNIAlogConnect
Start Menu folder:
miniOMNIAlogConnect
< Back
Install
Cancel

8. Therefore, the installation starts. This lasts only few seconds.

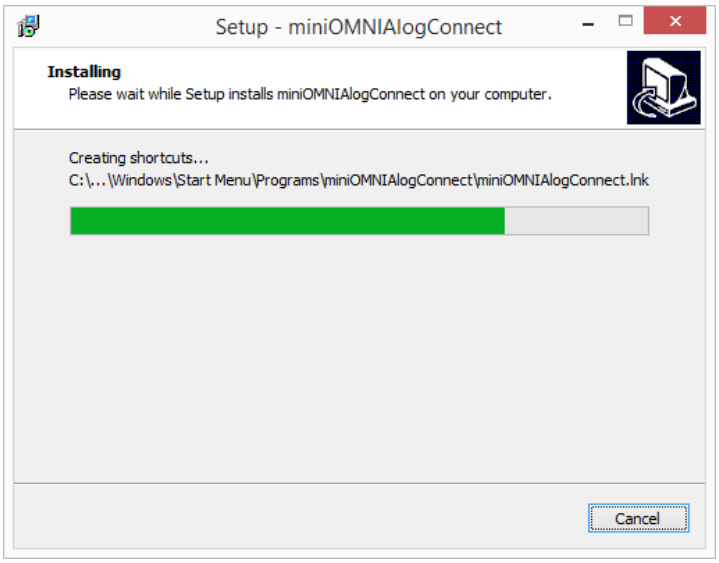

9. At the end of the installation, the following confirmation message appears:

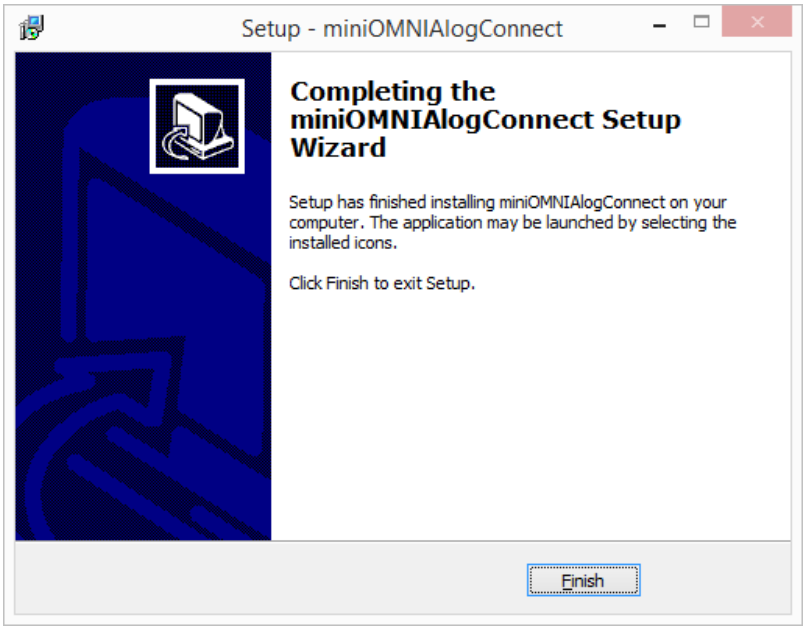
Setup - miniOMNIAlogConnect
Completing the miniOMNIAlogConnect Setup Wizard
Setup has finished installing miniOMNIAlogConnect on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Finish

10. Click on **FINISH**

PC-miniOMNIAlog CONNECTION

To create and establish the first connection between PC and miniOMNIAlog do as follows:

- Connect miniOMNIAlog to the PC using the supplied USB cable
- Wait for the end of the installation of the USB drivers
  NOTE: if the installation doesn't start automatically, it is possible to trace the drivers on the USB flash drive supplied with miniOMNIAlog. It is also possible to download it from SISGEO website and do a manual installation

- Start the tool **miniOMNIAlog Connect**
  NOTE: the tool has to be started with function "Run as administrator" (right button of the mouse on tool icon), otherwise the configuration doesn't end well. This procedure is necessary also if you are the administrator of the PC.

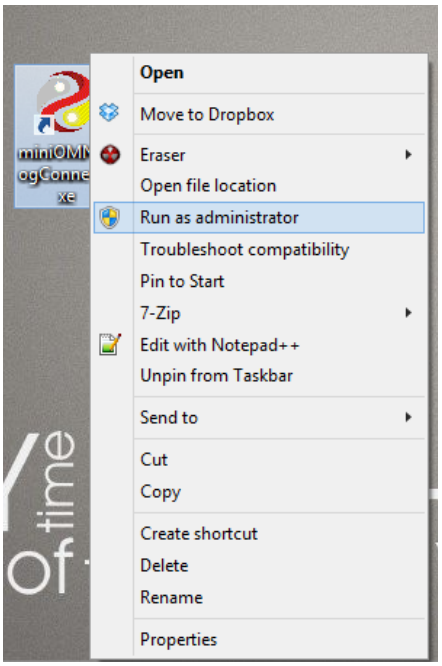

- If you don't run "As administrator" the following error will appear:

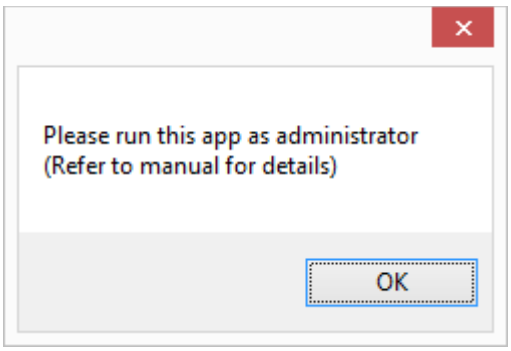

- So, the tool opens. Select the COM port assigned to miniOMNIAlog during the installation of the USB driver.
  NOTE: to know which COM port has been assigned to miniOMNIAlog, look to the COM ports list in Control Panel\Device Manager, maintaining the PC connected to miniOMNIAlog.

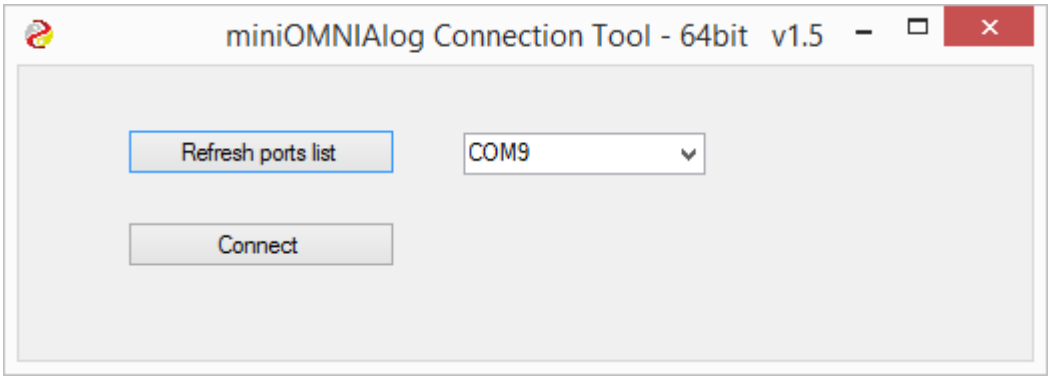

- If the **COM port** doesn't appear in the list, it is possible to click on bottom **Refresh ports list** to update the available ports.
- After selecting the right **COM port**, click on **Connect**

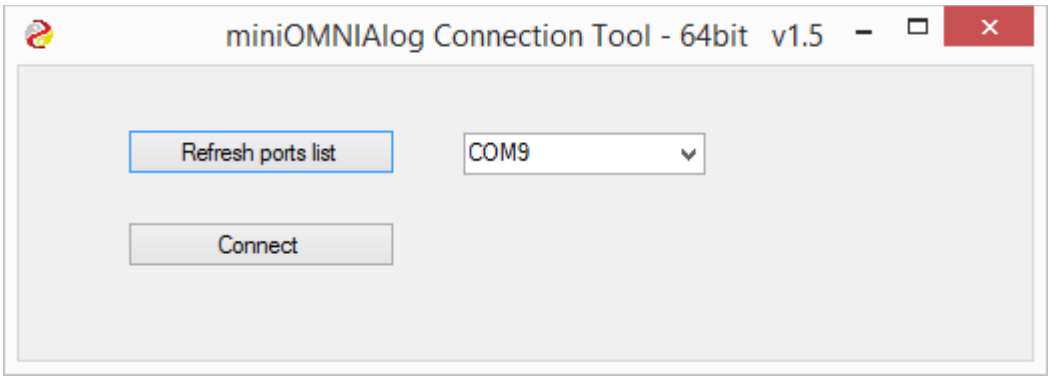

- The creation of the remote connection starts.

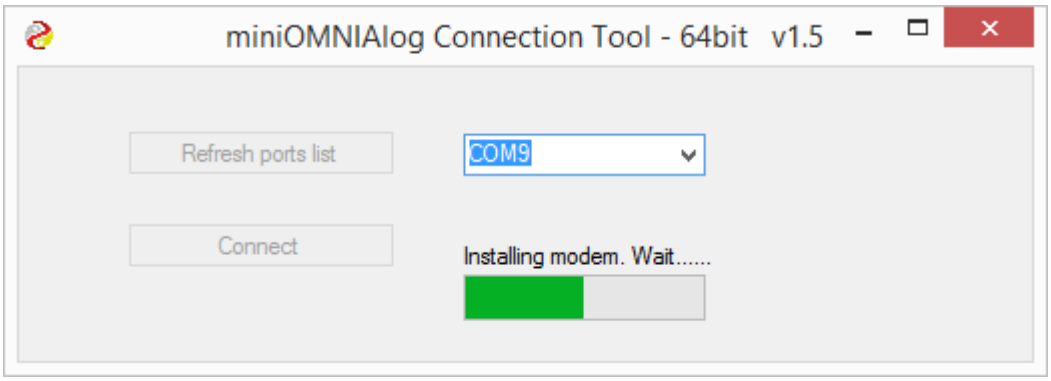

- Once the configuration ended, a confirmation message appears.

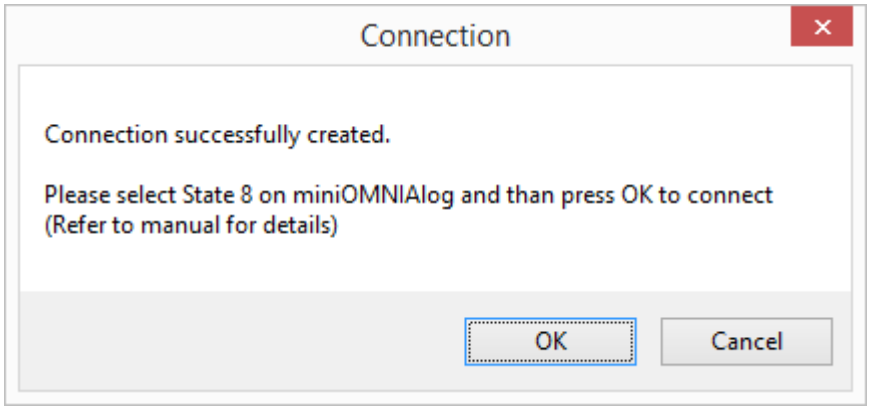

- As describe in the message, select menu 8 on miniOMNIAlog and press **ENTER button** (of miniOMNIAlog keyboard).
  When the **0 blinking** press **OK** on the tool.

- Clicking on OK, the connection starts.

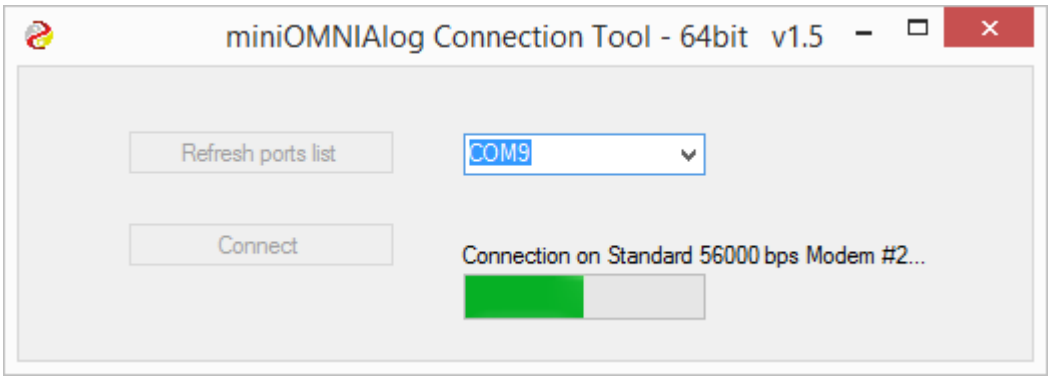

- When the connection with miniOMNIAlog is established, the following window appears

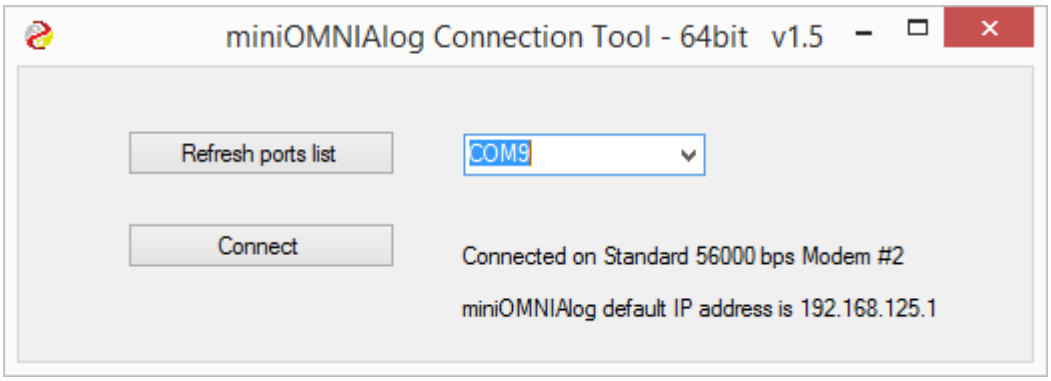
miniOMNIAlog Connection Tool - 64bit v1.5
Refresh ports list
COM9
Connect
Connected on Standard 56000 bps Modem #2
miniOMNIAlog default IP address is 192.168.125.1

- In this window you can find a reminder of defult IP address of miniOMNIAlog

- It is possible to close the tool clicking on the **X** of the window

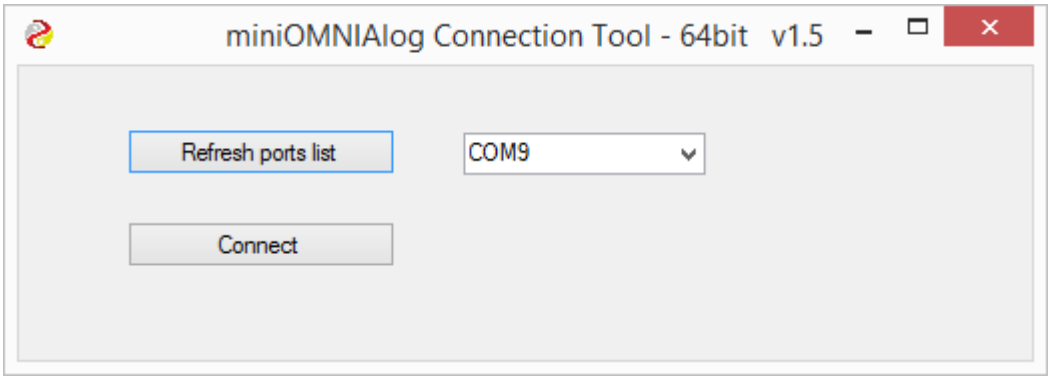

- Open any internet browser and enter the IP address **192.168.125.1**.
  NOTE: the 192.168.125.1 IP address cant' be changed by the user.

- You will be requested the miniOMNIAlog log in and you can browse in its pages.

- Every time that you need to reconnect a miniOMNIAlog or connect a new one, you have to open miniOMNIAlog Connection Tool, select the correct COM port and click on CONNECT.

Try to install wrong version

miniOMNIAlog Connection Tool has two different version. One for 32bit operative systems and one for 64bit operative systems.

miniOMNIAlog Connection Tool 64-bit on 32-bit operative system

If you try to launch a 64-bit version tool on 32-bit operative system, after the installation, the following error message appears:

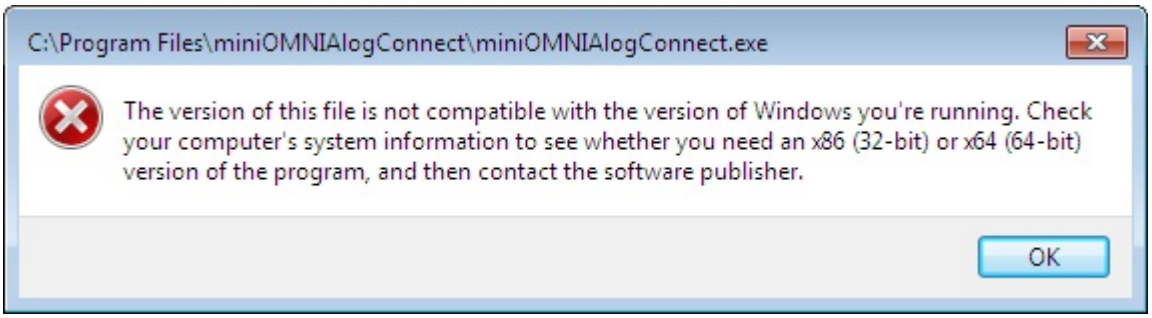
C:\Program Files\miniOMNIAlogConnect\miniOMNIAlogConnect.exe
The version of this file is not compatible with the version of Windows you're running. Check your computer's system information to see whether you need an x86 (32-bit) or x64 (64-bit) version of the program, and then contact the software publisher.
OK

To solve this problem you have to uninstall the tool (Control Panel / Programs and Features) and re-install the correct version of miniOMNIAlog Connection Tool.

miniOMNIAlog Connection Tool 32-bit on 64-bit operative system

After the installation. iIf you try to launch a 32-bit version tool on 64-bit operative system no message appears and all seams works fine. But when the miniOMNIAlog Connection tool try to create a new connection the following massage appears:

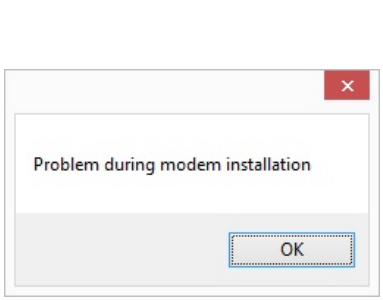

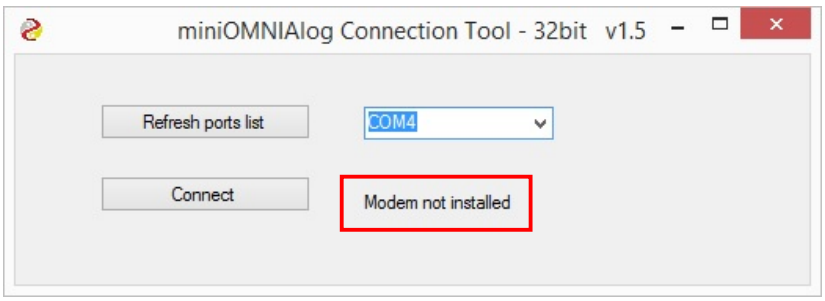

The 32-bit tool is able to works under 64-bit operative system but is not able to create the connection because the driver of dial-up connection is different.

Also in this case, to solve this problem you have to uninstall the tool (Control Panel / Programs and Features) and re-install the correct version of miniOMNIAlog Connection Tool.

HOW to disconnect PC from miniOMNIAlog

To disconnect the PC from miniOMNIAlog follows this steps:

- on miniOMNIAlog web page press **Logout** button;
- on Microsoft Windows select the **Network icon** on the application bar;

- **Networks menu** will open;

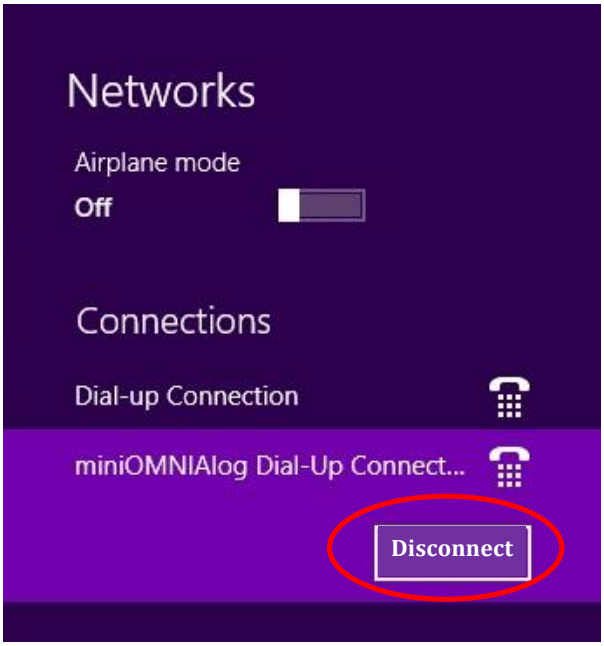

- Press on **Disconnect** button to close the Dial-Up connection between PC and miniOMNIAlog

NOTE: when the USB cable is unplugged the miniOMNIAlog is rebooted. This is necessary to switch from the USB power supply to the miniOMNIAlog power supply (internal batteries or external power supply)

Unplug USB cable without any disconnection procedure

If you unplug the USB cable without following the correct disconnection procedure the miniOMNIAlog is rebooted. Under “Data Monitor – Events” a “Power Fail” log appears.

USB connection by USB Isolator-Cable

USB port in miniOMNIAlog is not isolated.

For the connection between PC and miniOMNIAlog, SISGEO recommends the use of an isolated USB cable.

The USB isolator cable effects a potential decoupling of all USB connections. It is the professional tool to avoid and fight ground loops and equalize currents. It is also important to protect the system against overvoltage, that could damage miniOMNIAlog or cause flood readings.

USB isolated cable is especially recommended when the PC and miniOMNIAlog are connected to the main electricity network.

If you are using this cable, you need to consider that the maximum supplied current is 400mA, compared to a USB port that provides 500mA (maximal 400mA sourced from the 500mA primary input).

Therefore, when miniOMNIAlog is powered using an isolated USB cable it should be noted that:

- the USB port of the PC must be capable of delivering at least 500mA current;
- the connected sensor must not draw more than 35mA.

If these two conditions are not respected, you may experience some communication and power supply disconnections.

2G (GSM/GPRS) Modem

SIM card

If the miniOMNIAlog has an internal 2G (GSM/GPRS) modem, a SIM with APN for internet connection is needed. The SIM selected must be enabled to internet traffic to send e-mails and files on FTP Server (for further details call your ISP "Internet Service Provider").

Watch the following images to insert the SIM correctly:

NOTE: remove the power supply before proceeding.

- Insert the SIM card in the SIM-slot.

NOTE: pay attention to insert the SIM Card in the right side

- Lock the SIM-slot.

NOTE: the antenna connector is very delicate, pay attention to not damage its cable.

CAUTION TO BE TAKEN WITH 2G (GSM/GPRS) MODEM

In case miniOMNIAlog sends measures or alarms by e-mail or on FTP server, the user has to take into account that the USB serial of communication is shared with the 2G (GSM/GPRS) modem serial of communication.

For this reason, if the user launches miniOMNIAlog from webpages, the PC automatically disconnects.

If the user connects later, miniOMNIAlog is automatically put in STOP mode. Therefore, it will be possible to surf the pages.

Furthermore, it is impossible to visualize the measures in automatic update in page VISUALIZATION/MEASURES.

NOTE: SISGEO suggests, during installation, to not enable e-mail or data transmission on FTP server (both measures and alarms).

Once the user has verified the accuracy of readings, it is possible to enable e-mail or data transmission on FTP server.

APN configuration

On the miniOMNIAlog web server you can find a page where you have to edit an APN command. This command is necessary to configure the 2G (GSM/GPRS) modem with the correct parameters according to the selected SIM (these parameters depend on your ISP)

On the miniOMNIAlog web server:

- select the **Advanced** page from the left menu;
- select the **Connection** page;
- In the **Connection** page you have to:
  - write the APN of your Internet Service Provider (ISP) in the **APN** field (e.g.web.omnitel.it)
    NOTE: if, in place of APN, there is the field AT command initialization it is necessary to insert the following command: +CGDCONT=1,"IP","APN" (e.g. +CGDCONT=1,"IP","web.omnitel.it")
  - write the telephone number in "Telephone Number" field to establish a GPRS connection. Usually the number is ***99***1#** (connection using the default CID 1 overrode with the AT+CGDCONT command).
  - write the **Username** and **Password** according to your ISP parameter
- Press **Save Changes** to confirm the modifications
- Reboot miniOMNIAlog to make the changes effective

WEB PAGES FUNCTIONALITY

NOTE: The uploading speed of pages could be very slow, especially at first access. This occurs because the browser hasn't memorized the web pages in its cache yet. You have to wait until the pages are completely loaded, without repeatedly refresh the page.

Here you can find a brief description of the main miniOMNIAlog web pages.

Web pages are the same of OMNIAlog: pages or fields cannot be modified.

STATUS: Shows miniOMNIAlog status. In this page is shown the current miniOMNIAlog mode:

- *Run:* miniOMNIAlog is set and started. It will start acquisitions according to selected configuration.
- *Config: miniOMNIAlog is in configuration mode. No acquisition is in progress. In this mode it is possible to modify configuration parameters (channel configurations, acquisition time, etc..), delete and download logs.*

  Only "Admin" user can modify the "Config" mode
- *Stop: miniOMNIAlog is stopped. No acquisition is in progress. In this mode it is possible to download logs but it is not possible to change the configuration.*

NOTE: the humidity value shows *N.C.* because miniOMNIAlog hasn't a humidity sensor on board.

CONFIGURATION-ACQUISITIONS: in this page it is possible to set acquisitions frequency.

CHANNELS CONFIGURATION-LOCALS: in this page it is possible to set local analog channels on miniOMNIAlog.

ATTENTION: For sensors wiring it is necessary to refer to the schemes on miniOMNIAlog web pages or to the par. "Connection Schematics" at the end of this manual.

CHANNELS CONFIGURATION - DIGITALS: In this page it is possible to set digital channels to allow miniOMNIAlog to read digital instruments. Until now SISGEO digitalized inclinometers and Tiltmeter (RS-485 communication interface and MODBUS RTU communication protocol) have been implemented. For further information, refer to the digitized sensors manual.

DATA MONITOR - MEASURE: In this page it is possible to display last miniOMNIAlog acquisition cycle. It is also possible to download miniOMNIAlog executed and saved acquisitions.

NOTE: the speed of refresh of the web page may not be sufficient to see the readings changes in real time.

Type of user

Users type in miniOMNIAlog system are:

Admin → this user CANNOT change analog channels; it can change for example acquisition frequency or change the polynomial. This user cannot change settings which depend on hardware system;

User → this user can only view and download data

Web interface language setup

To modify the web interface language, connect miniOMNIAlog and access to web interface with the user (Admin or User) that needs to change the language

Then:

- Select , from left menu, **Advanced** and in the submenus **User Management**;
- In the page it will be displayed select **Language**;
- Insert the password in the field **Old password**;
- Press on **Save changes**.

Now the web interface will be converted in the selected language. To convert also the left menu it is necessary to refresh the web page pressing F5 or the specific symbol on the internet browser address bar.

NOTE: To avoid the conservation of the old language, it is necessary to completely delete the internet browser cache.

WIRING SCHEMES

Local analog sensor

The Instruments measure type that can be read with miniOMNIAlog are:

- **Voltage**
- **4-20mA Current Loop 2 wires**
- **4-20mA Transmitter 3-4 wires**
- **Thermistor NTC**
- **Vibrating Wire**
- **Vibrating Wire with Thermistor**
- **Ratiometric (2 channels needed)**

On the miniOMNIAlog electronic board there are four analog channels. Each channel has four clamps for the instrument signals (**A**,**B**,**C**,**D**) and one channel for the instruments shield ( )

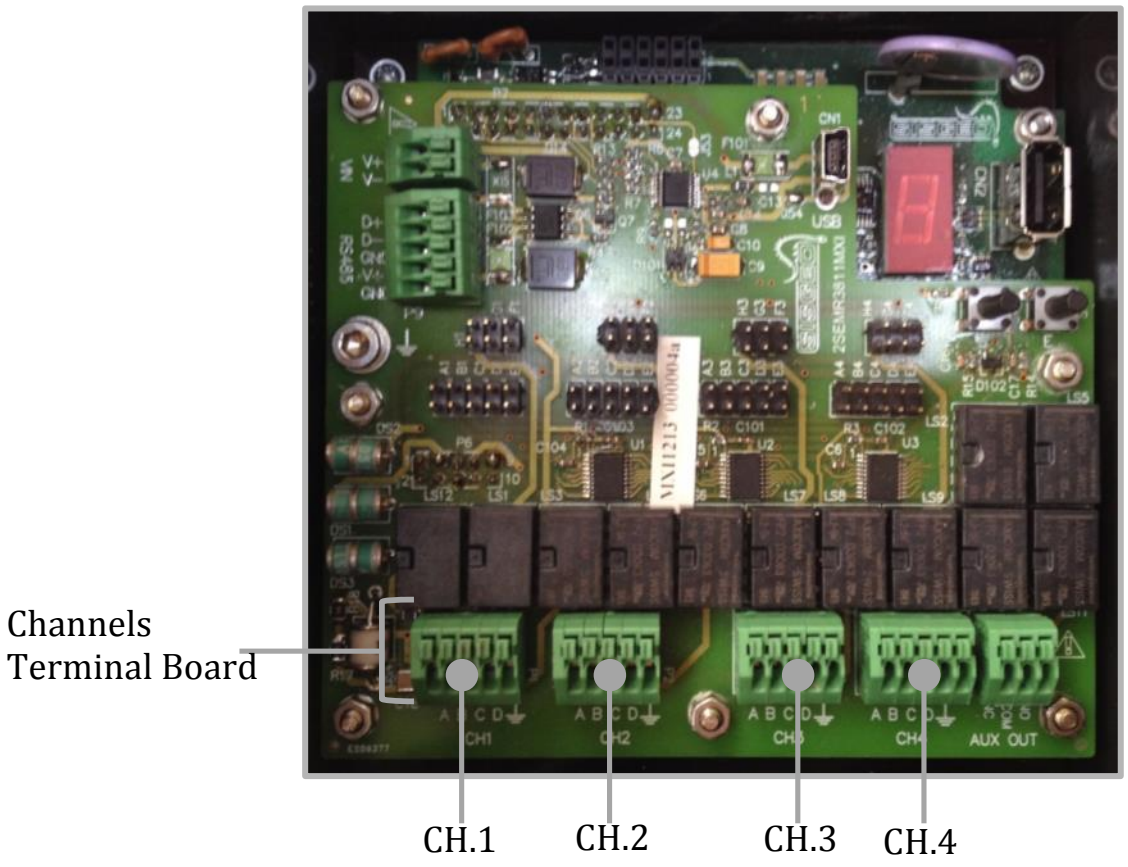

Digitalized sensor

miniOMNIAlog can read also the SISGEO digitalized (RS-485,MODBUS) instruments (like In-Place Inclinometers and Tiltmeters)
On the miniOMNIAlog board there is one clamp for the digitalized instruments connection.
Every clamp has 5 terminals:

- **3 for communication (RS-485) – "D+", "D-" and "GND" --**
- **2 for the instruments power supply (V OUT) – "V+" and "GND" --**

Digitalized Instruments Clamp

ATTENTION: The voltage V OUT (V+ and GND) is switched on and off from the software. V OUT is the unregulated power supply input V IN (V+ and V-).

It is not possible to power the digitalized instruments when the USB connection is on.

RS-485 clamp has a resistance of 120Ω; the same resistance should be exposed at the end of 485 bus.

Wiring

Refer to the following image for the correct wiring of instruments (analog and digitalized) to the clamp.

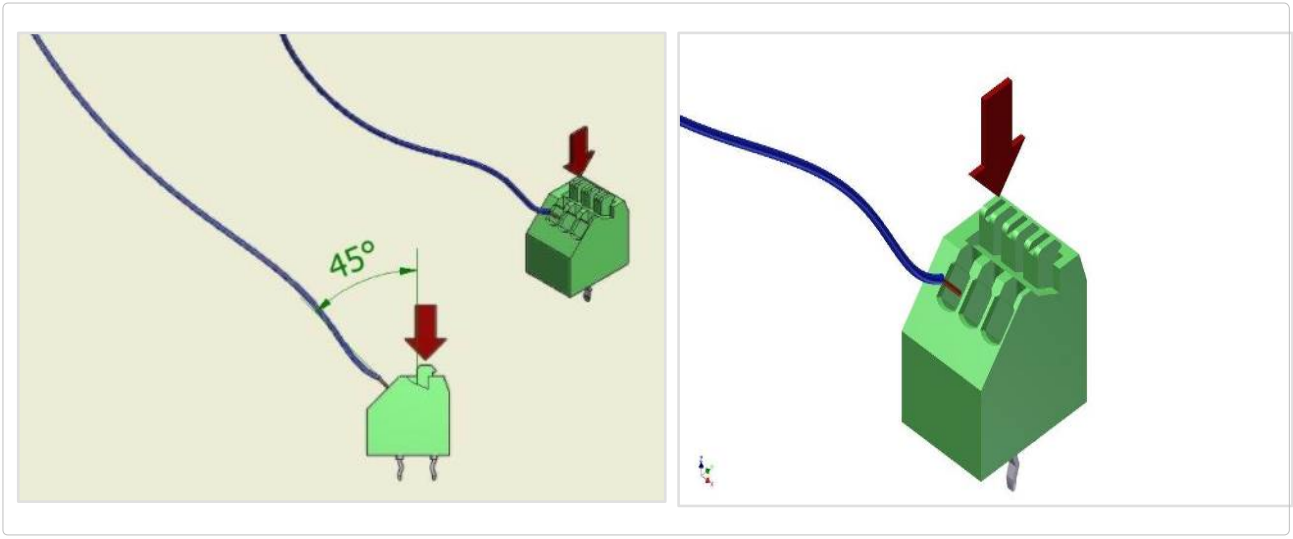

You have to push the little button over the clamp, insert the wire and release the button.
Following this scheme for each instruments measure type.

Voltage

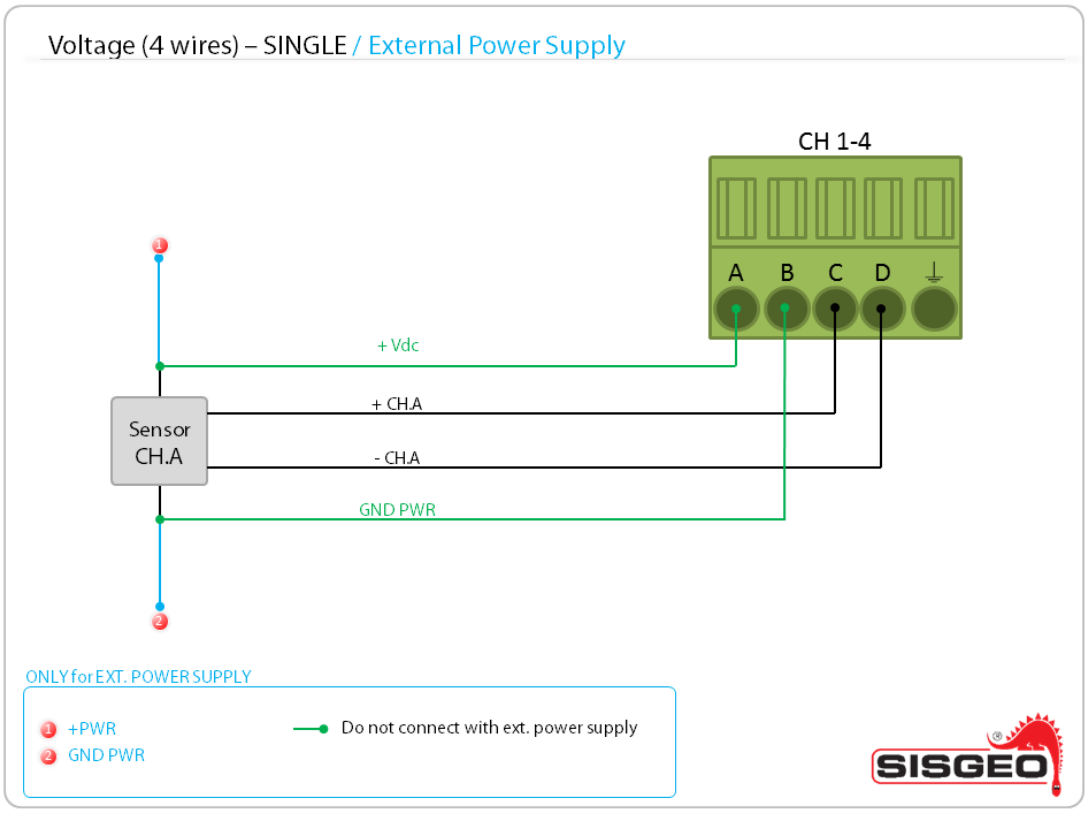

4-20mA Current Loop 2 wires

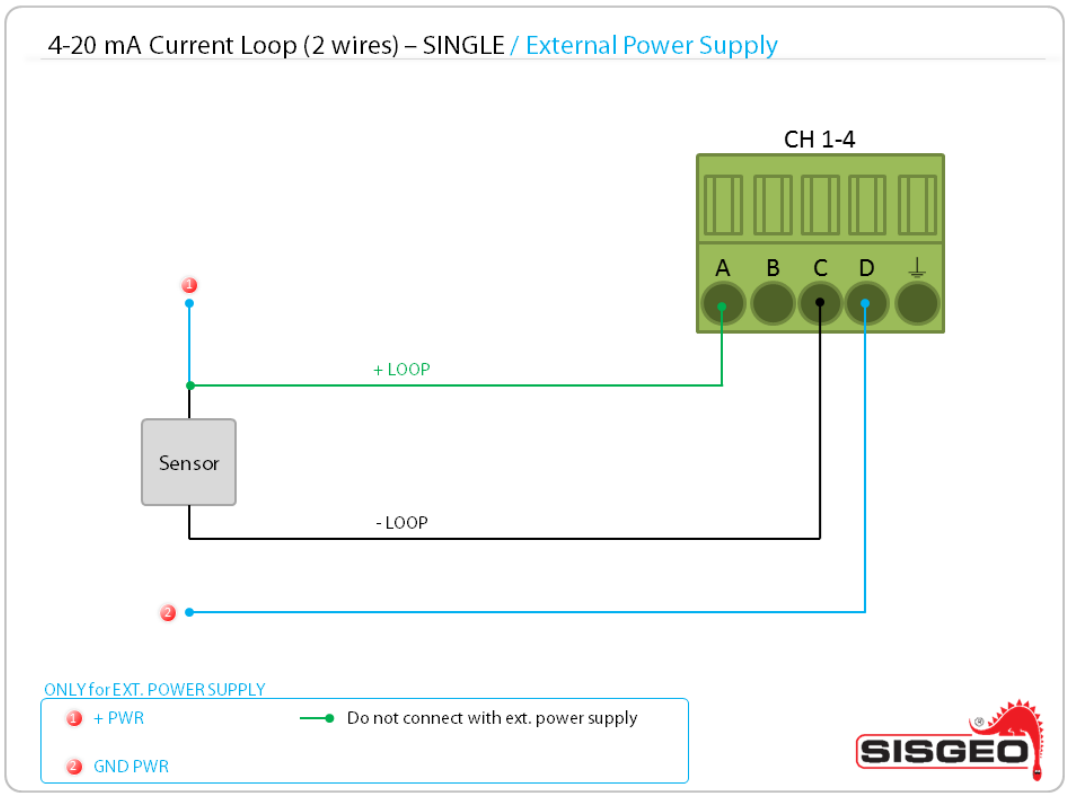

4-20mA Transmitter 3-4 wires

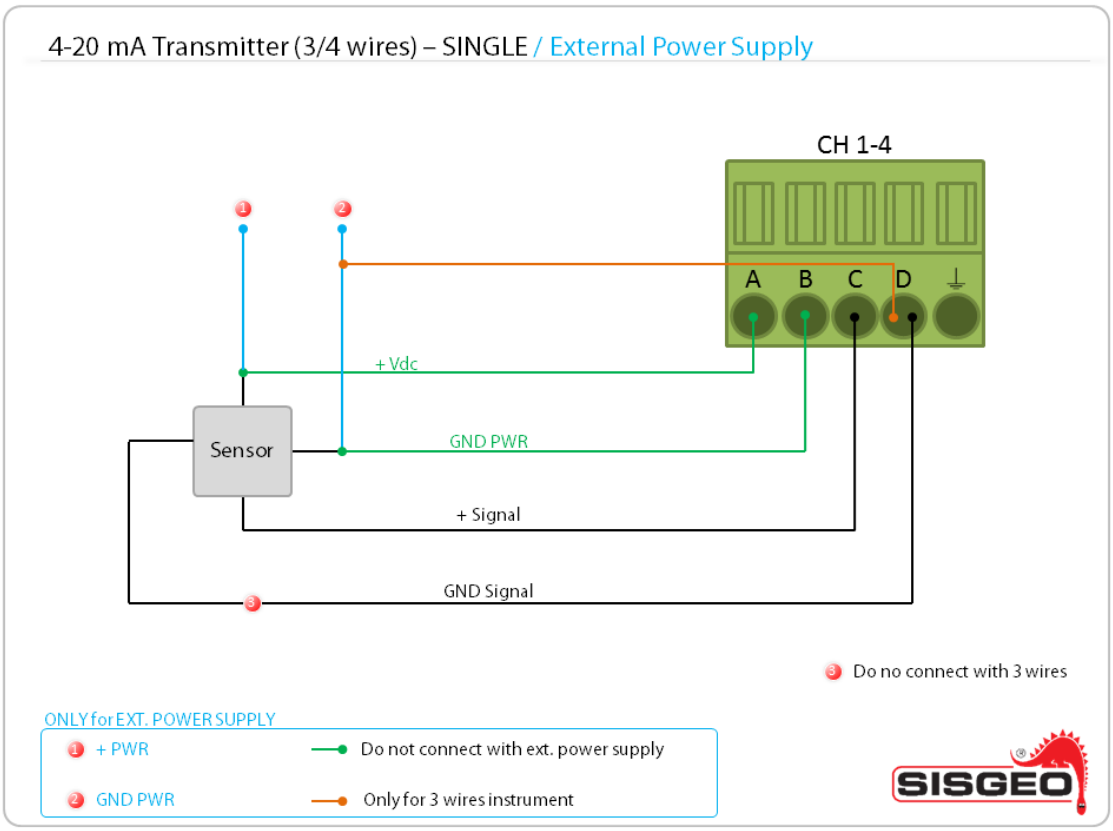

Thermistor NTC

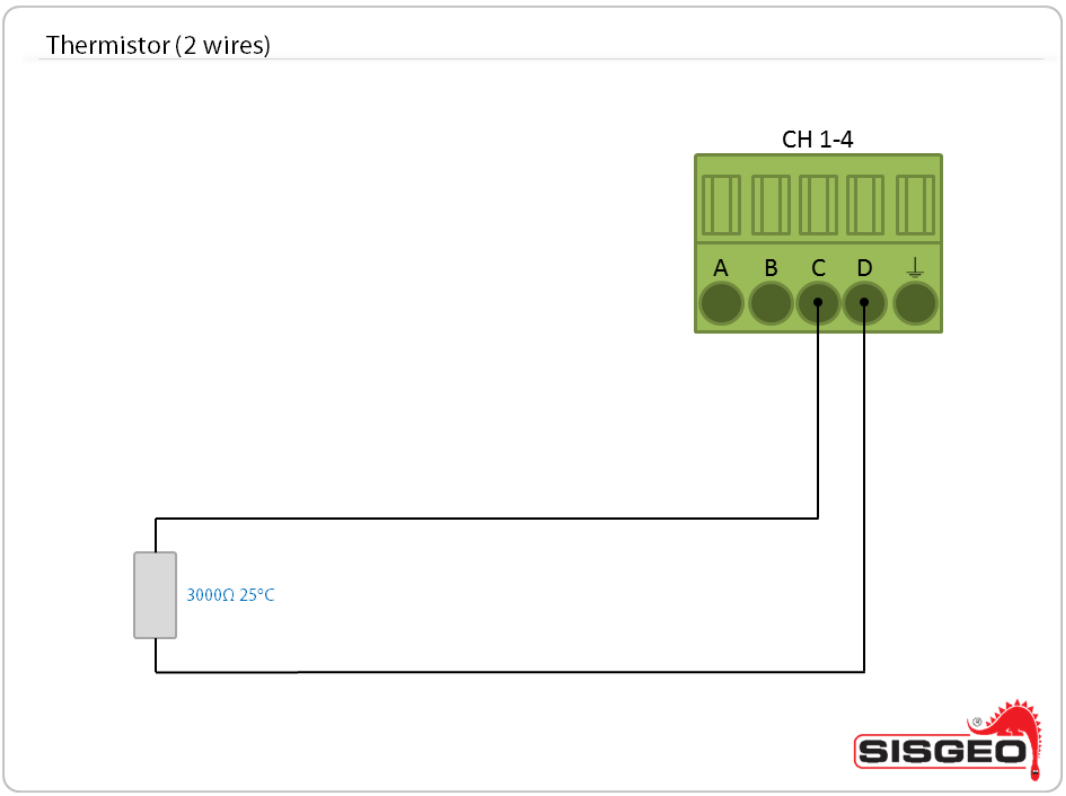

Vibrating Wire

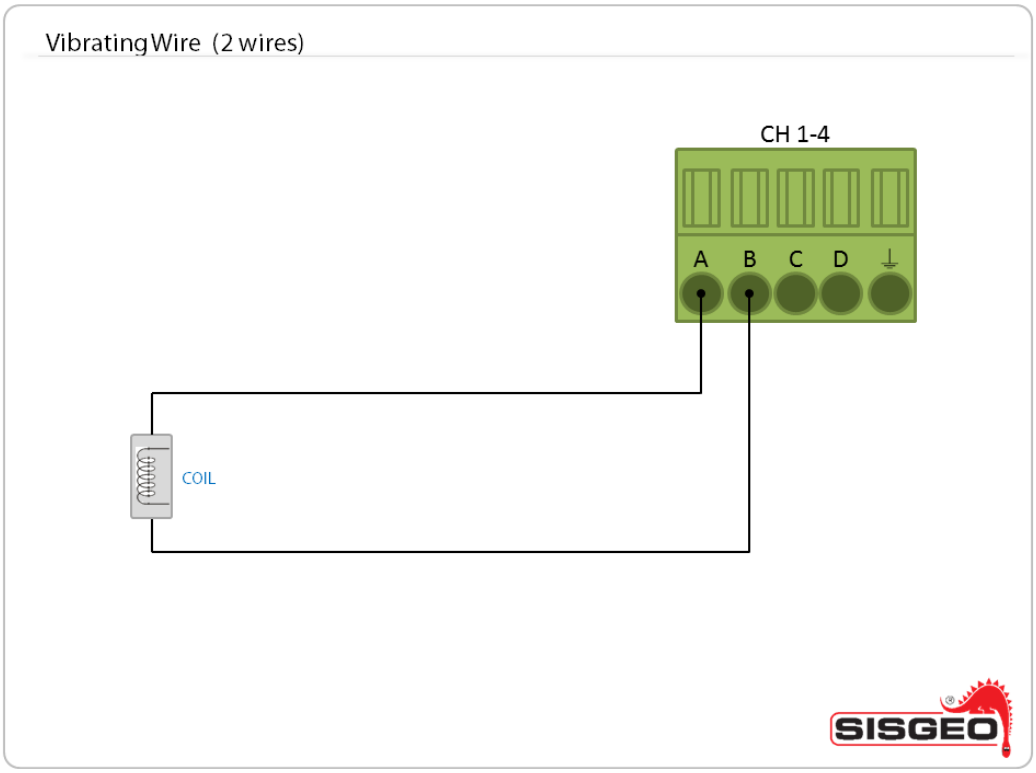

Vibrating Wire with Thermistor

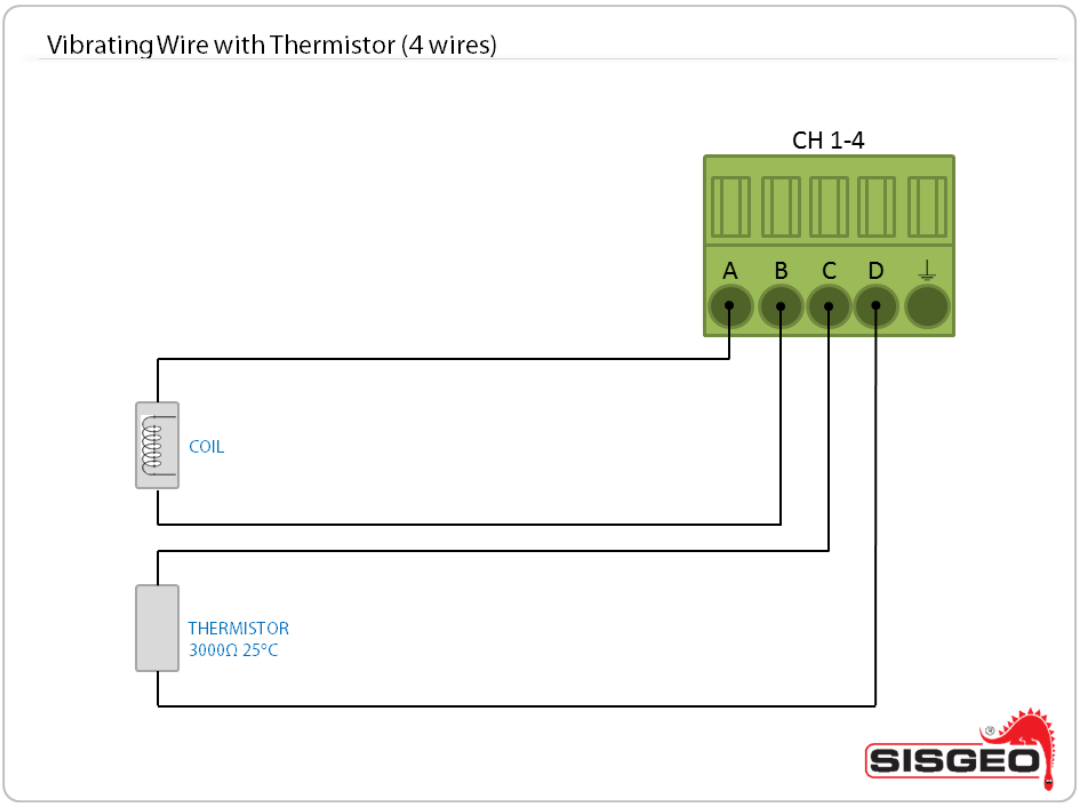

Ratiometric (6 wire)

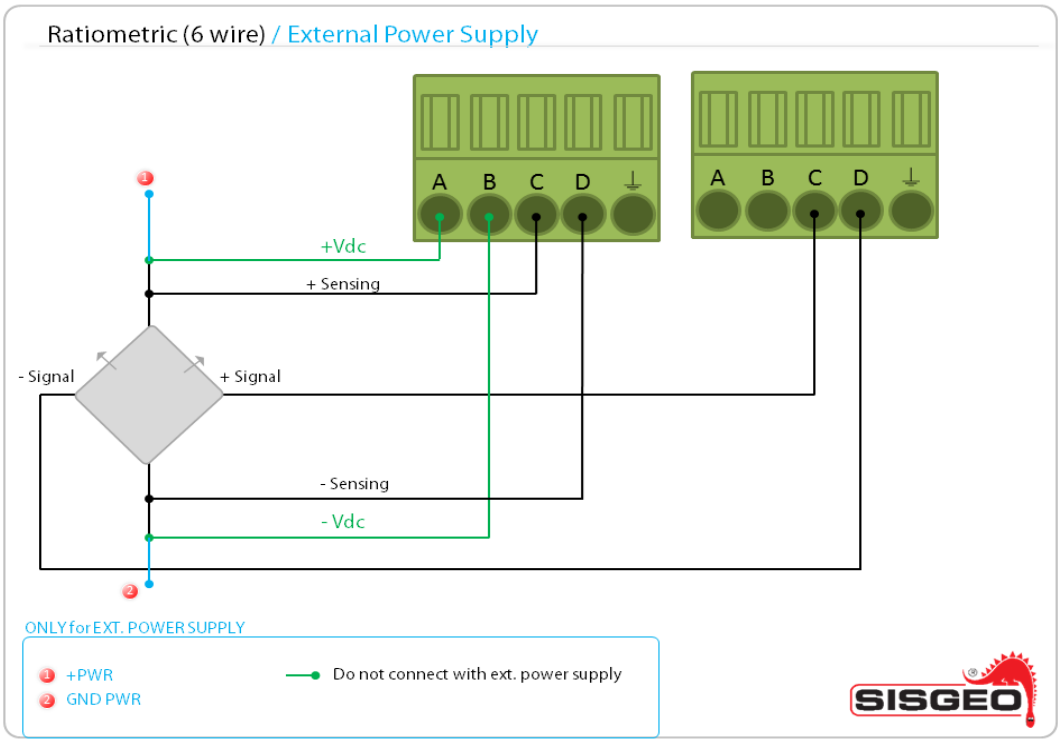

NOTE. for this measure type, two channels (Ch1+Ch2, Ch2+Ch3 or Ch3+Ch4) are necessary to read the instrument.

Potentiometer

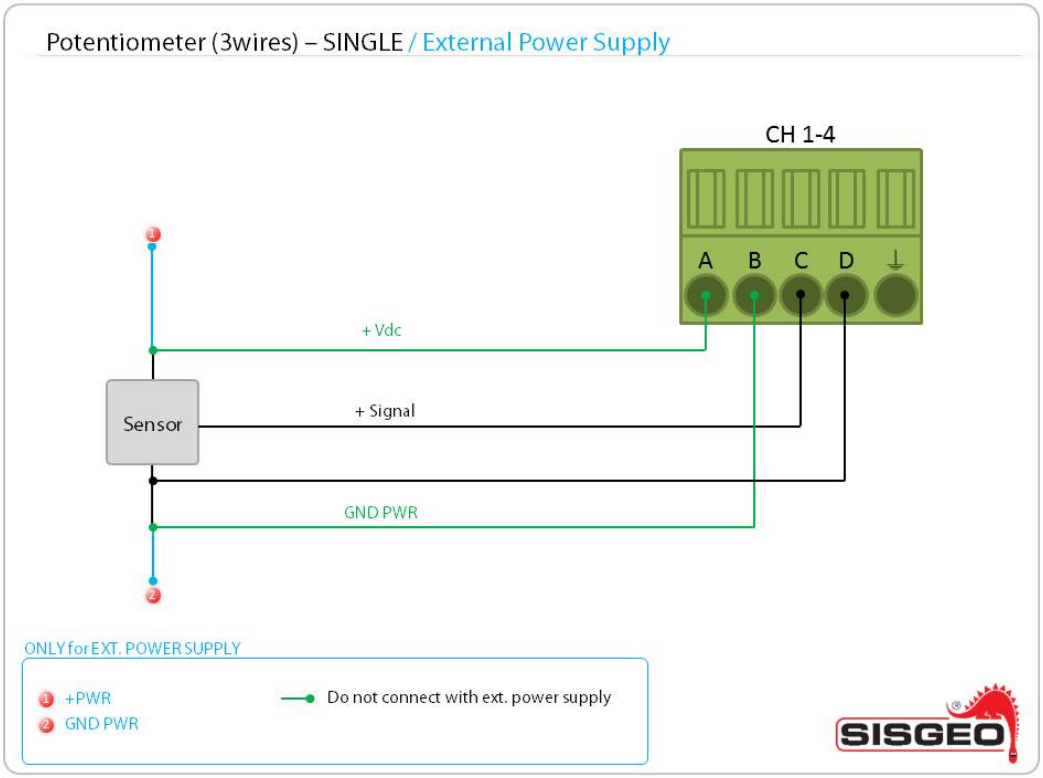

Digitalized Instruments

Digitized Instruments chain

Direct connection

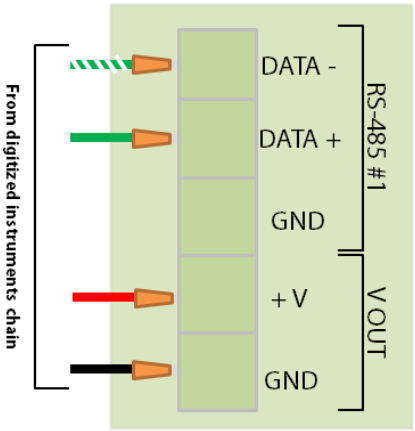

Relay Output: volt-free closure

On the miniOMNIAlog board there is one clamp for the relay output (for alarm, etc) managed from the software. The relay output is a volt-free closure (low voltage 30V, 1A).

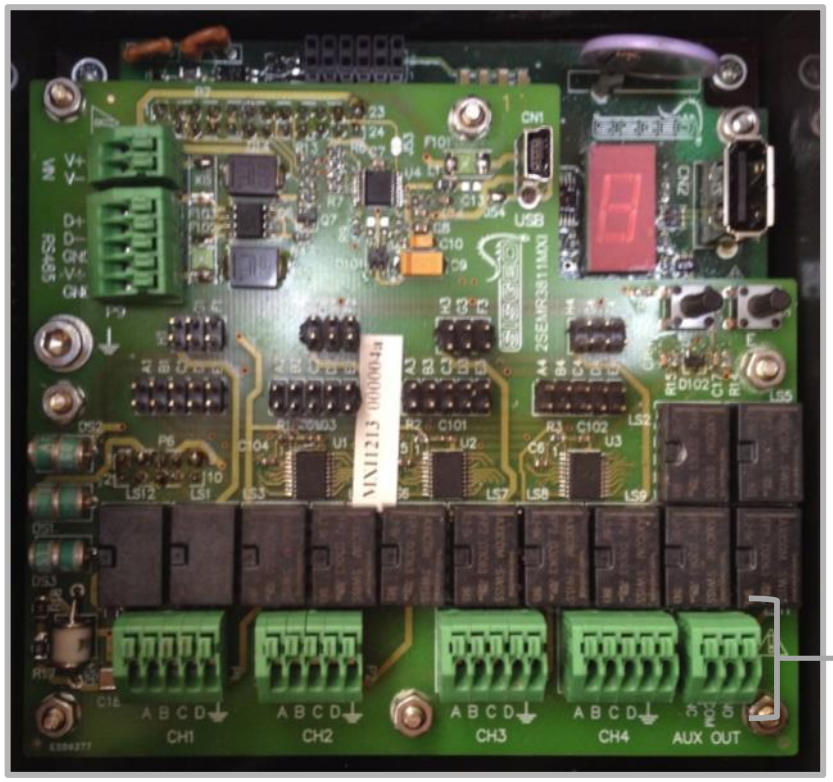

Note: The relay output change for 1 minute.

Anomalies and Alarm Warnings

Error Codes

When the miniOMNIAlog is in error status, it shows the letter "E" and error codes one after the other. Following, there are miniOMNIAlog error codes.

Error Code	Description
E0	General Communication or FTP/MAIL connection Error. It refers to log events on web server
E1	USB Drive not found.
E2	Error in file copy.
E3	miniOMNIAlog is already in run state.
E4	It is impossible to start the miniOMNIAlog.
E5	miniOMNIAlog is already in configuration state.
E6	Iti s impossible to stop the miniOMNIAlog.

The system shows general error codes because it has a simple display and so it would be difficult to encode each case. The system will log the event/error and it will be visible and downloadable from the web.

Icons and power supply alarm thresholds

miniOMNIAlog with external power supply

Icon showed: plug
Display: L

High alarm threshold: 14V
Low alarm threshold: 10.5V

miniOMNIAlog with internal battery pack

Icons showed: cell (battery)
Full battery: voltage≥ 9.6V
Medium battery: 8.76V < voltage < 9.6V
Low battery: Voltage ≤ 8.76V

Display:
3 lines: Voltage ≥ 9.6V
2 lines: 8.76V < voltage < 9.6V
1 line: voltage ≤ 8.76V

High alarm threshold: not present
Low alarm threshold: 8.76V

Maintenance

Always disconnect miniOMNIAlog from its power source during maintenance.

REPAIR OR MODIFY miniOMNIAlog

SISGEO doesn't allow the user to repair or modify miniOMNIAlog. The lack of respect of this instruction could provoke damages that aren't covered by any warranty. In case of malfunctioning, contact the assistance SISGEO.

miniOMNIAlog cleanliness

To clean miniOMNIAlog, use a soft cloth without using any cleaning product.

CALIBRATION

SISGEO suggests a periodic calibration of miniOMNIAlog every 2 years or when necessary. Contact the Technical Assistance SISGEO to receive further information

TROUBLESHOOTING

miniOMNIAlog: Basic Troubleshooting

This paragraph provides basic miniOMNIAlog troubleshooting tips.

Are you up-to-date?

1. Verify that you installed the last version of firmware
2. Verify that you have the last and the correct version of USB driver
3. Verify that you have an adequate power supply (from battery pack or external power supply) on the V IN clamp of miniOMNIAlog; check if the voltage is within the range accepted by miniOMNIAlog and stable.

If miniOMNIAlog doesn't turn on or the display stops responding

Follow this step, testing after each:

1. remove power supply on V IN clamp for 10 seconds and try to reconnect.

If miniOMNIAlog doesn't appear under Windows " Device Manager" as virtual COM port.

Follow these steps, testing after each::

1. restart your computer.
2. remove and reinstall the USB driver and restart your computer
3. remove power supply on V IN clamp for 10 seconds and try to reconnect.

It is impossible to upload the configuration

Follow this step, testing after each:

1. in webpage STATUS, verify that OMNIAlog is in "Config"
2. make sure that the configuration you are trying to upload has been created with the same major release of the firmware on OMNIAlog

NOTE: if what is written above is correct, the configuration file could be altered. In this case, OMNIAlog warns with an error message; the file is no more usable. We suggest to repeat the configuration process.

If OMNIAlog blocks during an acquisition

Follow this step, testing after each:

1. verify the events log and refer to the manual "miniOMNIAlog & OMNIAlog_Codes Alarms-Events" for the comprehension of the eventual logs;

2. verify that OMNIAlog has a correctly power supply. If the power supply is below the minimum threshold or over the maximum threshold of power supply, OMNIAlog blocks every activity in progress;
3. verify the alarm log to identify the problem and refer to the manual “miniOMNIAlog & OMNIAlog_Codes Alarms-Events” to understand the eventual logs;
4. verify if in alarm log it is present an “overcurrent” error. In case of overcurrent, OMNIAlog stops the acquisition.
5. verify the available memory. In case of full memory, OMNIAlog stops the acquisition.

It is impossible to download data on the USB flash-drive

Follow this step, testing after each:

1. verify that the USB flash-drive is formatted in FAT32;
2. verify with the PC that the USB flash-drive is read without any errors.
1. try with a different USB flash-drive

miniOMNIAlog: Local Communication Troubleshooting

This paragraph provides miniOMNIAlog local communication troubleshooting tips.

Are you up-to-date?

1. Verify that you installed the last version of firmware
2. Verify that you have the last and the correct version of USB driver
3. Verify that you have the correct power supply (from battery pack or external power supply) on the V IN clamp of miniOMNIAlog

If you are not able to establish the connection with miniOMNIAlog .

Follow these steps, testing after each:

1. be sure that on 7 segment display a blinking 0 appears. If an 8 appears, wait for a blinking 0.
2. check if the virtual COM port is showed under Microsoft Windows "Device Manager" (see "*If miniOMNIAlog doesn't appear under Windows " Device Manager" as virtual COM port*" paragraph.).
3. restart your computer.
4. remove and reinstall the USB driver and restart your computer.
5. remove the power supply on V IN clamp for 10 seconds and try to reconnect.
6. Make sure that the username and password for remote connection are correct.
7. using Hyper Terminal check if the baud rate of serial communication is setting to 115200bps. After having established the connection with Hyper Terminal, if you press ENTER the miniOMNIAlog must answer "AT".

The connection through miniOMNIAlog and computer falls down .

Follow these steps, testing after each:

1. be sure that your PC is not set on Energy Saving mode
2. if you are using an isolated USB cable keep in mind that these cables usually can provide a limited current.
3. Try to change the USB cable
4. Try with another USB port of your PC

miniOMNIAlog: e-mail Sending Troubleshooting

This paragraph provides miniOMNIAlog e-mail sending troubleshooting tips.

The e-mail transmission involves different devices. In this document, we try to determine which device could cause the problem and then we try to solve it.

The "system" is composed as follows:

1. miniOMNIAlog
2. Internet Service Provider (ISP): allows the communication between miniOMNIAlog and the e-mail server
3. E-mail Server (ESP): allows to send and to receive e-mails

NOTE: it may be that the ISP (Telecom, Vodafone, AT&T, Varizon, etc.) doesn't coincide with the ESP (Gmail, AOL, etc.)

Resolution

First of all, insure with your IPS that:

1. The SIM card is enabled to the internet
2. The e-mail transmission is allowed on the used APN

Secondly, insure with your ESP that:

3. there are no momentary breakdowns on ESP server
4. the username and password of your e-mail account are valid and accepted
5. the e-mail account you want to use is active

These points do not depend on SISGEO. SISGEO cannot solve these problems.

If you don't have any problem with the ISP and the ESP, you could proceed looking for causes on miniOMNIAlog.

If miniOMNIAlog doesn't send any e-mail although it is configured.

Follow these steps, testing after each:

6. verify the events log and refer to manual "miniOMNIAlog & OMNIAlog_Codes Alarms-Events" to understand the eventual logs
7. verify that the SIM card is properly inserted in its slot.
8. verify you inserted your SMTP server account correctly ("SMTP Server Configuration" page)
9. verify that SMTP account is a simple authentication. miniOMNIAlog doesn't support SSL.
10. verify that there is a 2G (GSM/GPRS) coverage on the site were miniOMNIAlog is installed. In some place there is only a 3G and 4G coverage. miniOMNIAlog is not compatible with 3G, 4G and CDMA networks.
11. verify that there is a good 2G (GSM/GPRS) signal on the site were miniOMNIAlog is installed

miniOMNIAlog: FTP server Sending data Troubleshooting

This paragraph provides FTP server sending data troubleshooting tips.

The e-mail transmission involves different devices. In this document, we try to determine which device could cause the problem and then we try to solve it.

The "System" is composed as follows:

1. miniOMNIAlog
2. Internet Service Provider (ISP): allows the communication between miniOMNIAlog and FTP server
3. server FTP: physical space in which it is possible to memorize files

NOTA: the FTP server could be completely transferred to societies that offer an hosting FTP service. It could also be internal. In this secondo case, you have to ask for information to your IT manager.

First of all, insure with your IPS that:

1. The SIM card is enabled to the internet traffic through APN
2. The data transmission on FTP server is allowed on the used APN

Insure with your system administrator or with the society that supplies the hosting FTP service that:

1. there are no momentary breakdowns on FTP server
2. the username and password of FTP account are valid and accepted
3. that the FTP account and the same FTP server, that the user wants to use, are active

These points do not depend on SISGEO. SISGEO cannot solve these problems.

If you don't have problem with the ISP and the FTP server, you could proceed looking for causes on miniOMNIAlog.

If miniOMNIAlog doesn't send any data on FTP server also if configured.

Follow these steps, testing after each:

1. verify the events log and refer to manual "miniOMNIAlog & OMNIAlog_Codes Alarms-Events" to understand the eventual logs
2. verify that the SIM card is property insert in its slot.
3. verify that you have inserted your FTP server account correctly ("*Measure log data transfert*" page)
4. verify that the FTP server address is inserted in numeric format (exemple: 62.100.100.1)
5. verify that the FTP server is a basic authentication FTP (for example not MD5, KERBEROS etc.) and that doesn't utilize any secure layer (for example SSH/SSL, FTPS/SFTP etc.). miniOMNIAlog does not support secure layer and encrypted authentication (encrypted username and password).

6. verify that there is a 2G (GSM/GPRS) coverage on the site were miniOMNIAlog is installed. In some place there is only a 3G or 4G coverage. miniOMNIAlog is not compatible with 3G, 4G and CDMA networks.
7. verify that there is a good 2G (GSM/GPRS) signal on the site were miniOMNIAlog is installed.

miniOMNIAlog: Measure Troubleshooting

Are you up to date?

1. Verify that you installed the last version of firmware
2. Verify that you have the correct power supply (from battery pack or external power supply) on the V IN clamp of miniOMNIAlog

This paragraph provides measure data troubleshooting tips.

One or more vibrating wire instruments are not read.

Follow these steps, testing after each:

1. verify the events log and refer to the manual "miniOMNIAlog & OMNIAlog_Codes Alarms-Events" to understand the eventual logs;
2. verify the instrument with a portable datalogger;
3. verify the connection of instruments on miniOMNIAlog inputs;
4. change the parameters "Excitation time" (accepted values from 5 to 100) and "Delay Time" (accepted values from 20 to 100) focusing on this last one;
5. try to contract the parameters "Start Frequency" and "End Frequency" according to the value read with the portable datalogger,
6. consult the reference manual of the instrument

One or more analog instruments are not read.

Follow these steps, testing after each:

7. verify the events log and refer to the manual "miniOMNIAlog & OMNIAlog_Codes Alarms-Events" to understand the eventual logs;
8. verify the instrument with a portable datalogger;
9. verify the connection of instruments on miniOMNIAlog inputs;
10. verify that the configured parameters are coherent and correct according to the type of connected instrument (power supply, warm-up time etc)
11. consult the reference manual of the instrument

F.A.Q. (Frequently asked questions)

It is possible to find all F.A.Q on SISGEO website at the following link:

http://www.sisgeo.com/faq-readout-units-and-dataloggers/

ASSISTANCE

After-sales assistance for calibrations, maintenance and repairs, is performed by Next Industries' Service Department.

The authorization of shipment shall be activated by RMA "Return Manufacturer Authorization".

Send back the instrument/equipment with their complete accessories, using suitable packaging, or, even better, the original ones.

The shipping costs shall be covered by the sender.

Please return to the following address with suitable delivery document:

NEXT INDUSTRIES S.r.l.

Via F.Serpero, 4/F2

20060 MASATE (MI)

On the delivery document is mandatory to indicate the RMA code received.

Technical assistance e-mail: assistance@next-industries.com

APPENDIX A

R&TTE Declaration of Conformity (DoC)

The Manufacturer	SISGEO Srl
Address	Via Serpero 4/F1, 20060 Masate (Milano), Italy

hereby declare under our sole responsibility that the product:

Product name	**miniOMNIAlog**
Trade name	SISGEO
Relevant supplementary information	Not applicable

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC).
The product is in conformity with the following standards and/or other normative documents:

HEALTH & SAFETY (Art. 3(1)(a)):	EN 61010-1:2010, EN 62311:2008
EMC (Art. 3(1)(b)):	EN 301489-1 V. 1.9.2, EN 301489-7 V. 1.3.1
SPECTRUM (Art. 3(2)):	EN 301511 V. 9.0.2
OTHER (Art. 3(3)and voluntary specs):	Not applicable
Limitation of validity (if any):	Not applicable

Supplementary information:

Notified body involved:	NEMKO 0470
Technical file held by:	SISGEO Srl

Place and date of issue (of this DoC): ***MASATE (MI), November 27th, 2013***

Signed by:

Name (in print): ROMANO LAMPERTI
Title: MANAGING DIRECTOR

SISGEO S.r.l.-Via F. Serpero, 4/F1 - 20060 MASATE (MI)
Tel.++39-02-95764130 – Fax ++39-02-95762011 E-mail:info@sisgeo.com – http://www.sisgeo.com

HOW TO CHANGE THE HARDWARE and SOFTWARE CHANNELS CONFIGURATION

- SISGEO is not responsible for any malfunctioning or damages following the change of the hardware/firmware configuration described in this document.
- To change the firmware you must access miniOMNIAlog through the configurator-user 'Sisgeo'; this user has more privileges than user 'Admin' and, therefore you must be really careful to avoid problems.
- The hardware e firmware changes must be coherent; i.e. if the channel CH1 hardware is configured with vibrating wire measure, also the software configuration must be coherent.

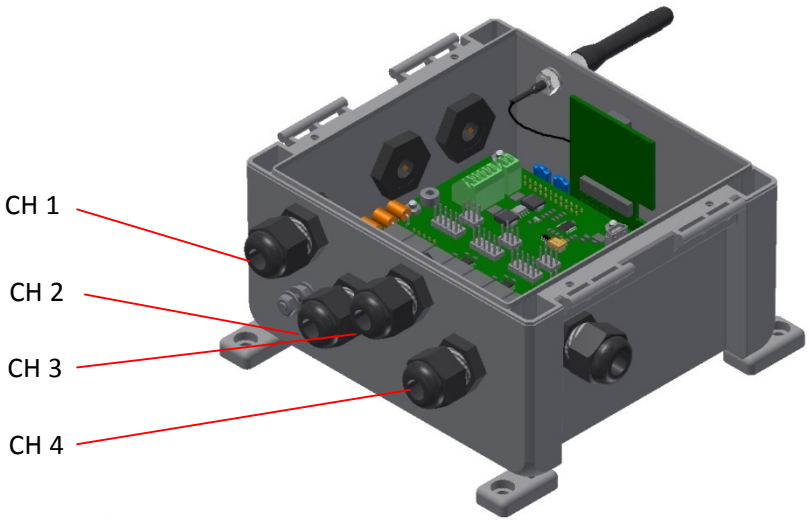

The following are possible configurations:

Measure Type	Power Supply Available
Current loop (2 wires)	24V, 12V, external
Transmitter (3-4 wires)	24V, 12V, external
Voltage (4 wires)	24V, 12V, 5V, external
Wheatstone bridge (6 wires, 2 channels used)	5V
Thermistor (NTC)	--
Vibrating wire	--
Vibrating wire + Thermistor	--

Firmware configuration

In order to configure local analog channels it's necessary to connect the miniOMNIAlog to a pc (see the **miniOMNIAlog Quick Start Manual**). Once established the connection, on your internet browser, insert the IP address of the miniOMNIAlog (192.168.125.1 as default) and login as "Sisgeo" user, with the credentials reported below:

USR: **Sisgeo**

PSW: **Iccee**

In the main menu, click on **Channels Configuration -> Locals**: in this page it is possible to set local analog channels on miniOMNIAlog.

- Click on the **Enable** field, in order to activate the channel.
- Click on the **Edit** button, in order to configure the channel.

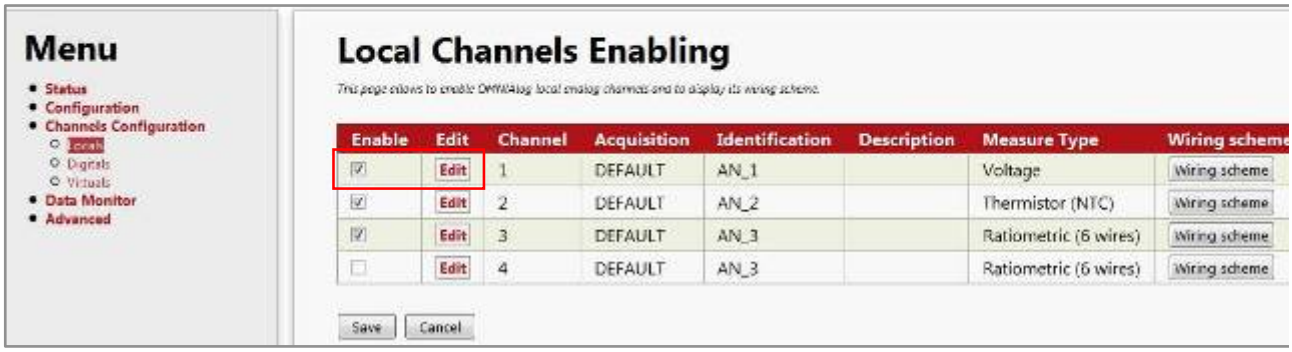

One input measure type

- Select **1**, by the **Input Nr.** drop-down menu

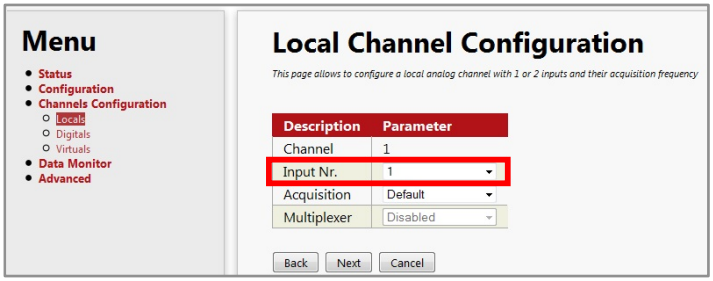

- Selecting the measure type by the **Measure Type** drop-down menu.

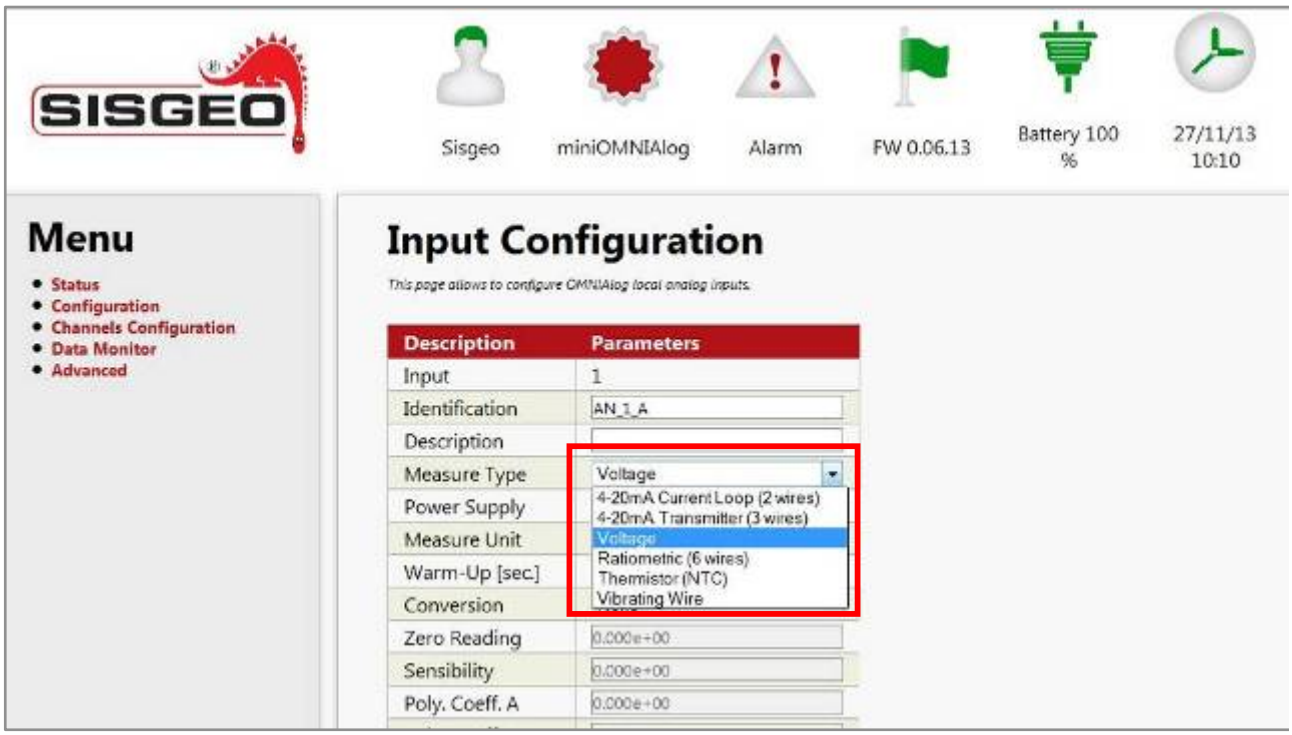

Two inputs measure type

- Select **2**, by the **Input Nr.** drop-down menu

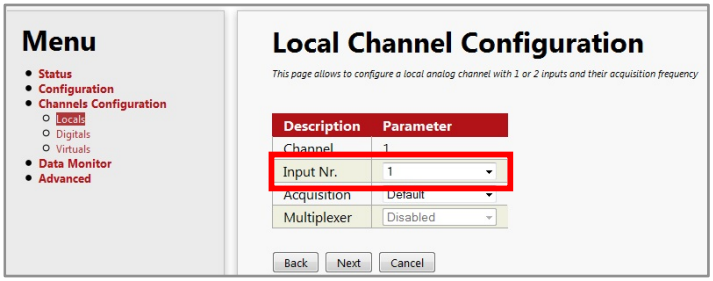

- Selecting the measure type by the **Measure Type** drop-down menu (only Vibrating wire + Thermistor is available) .

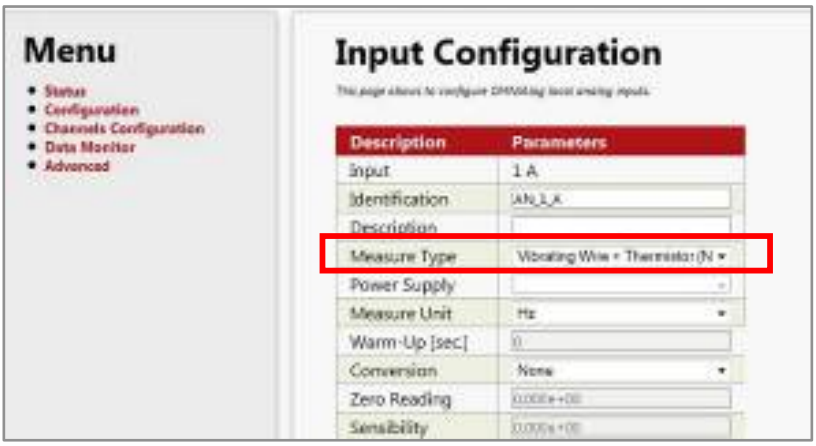

- Configure all the parameters following the properly instrument electric characteristics

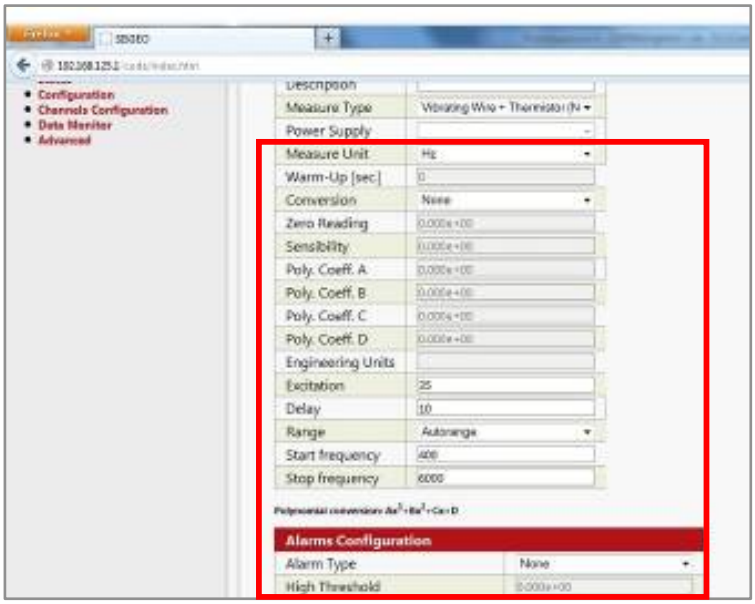

- Configure, if necessary, the second input (NTC) also.

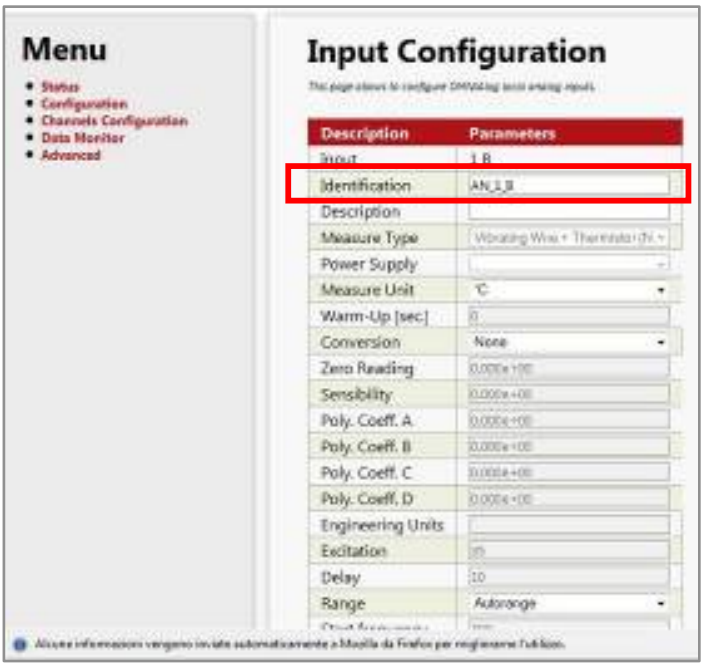

Hardware configuration

After the software configuration of miniOMNIAlog channels it is necessary to change also the hardware configuration according to the measure type of each channels.

To change the hardware configuration follows these steps:

- Disconnect the power supply from the miniOMNIAlog.

- According to the Measure Type and Power Supply configurated by web pages for each Channel, insert the jumper on the electronic board (Channel jumpers), following the schemes below:

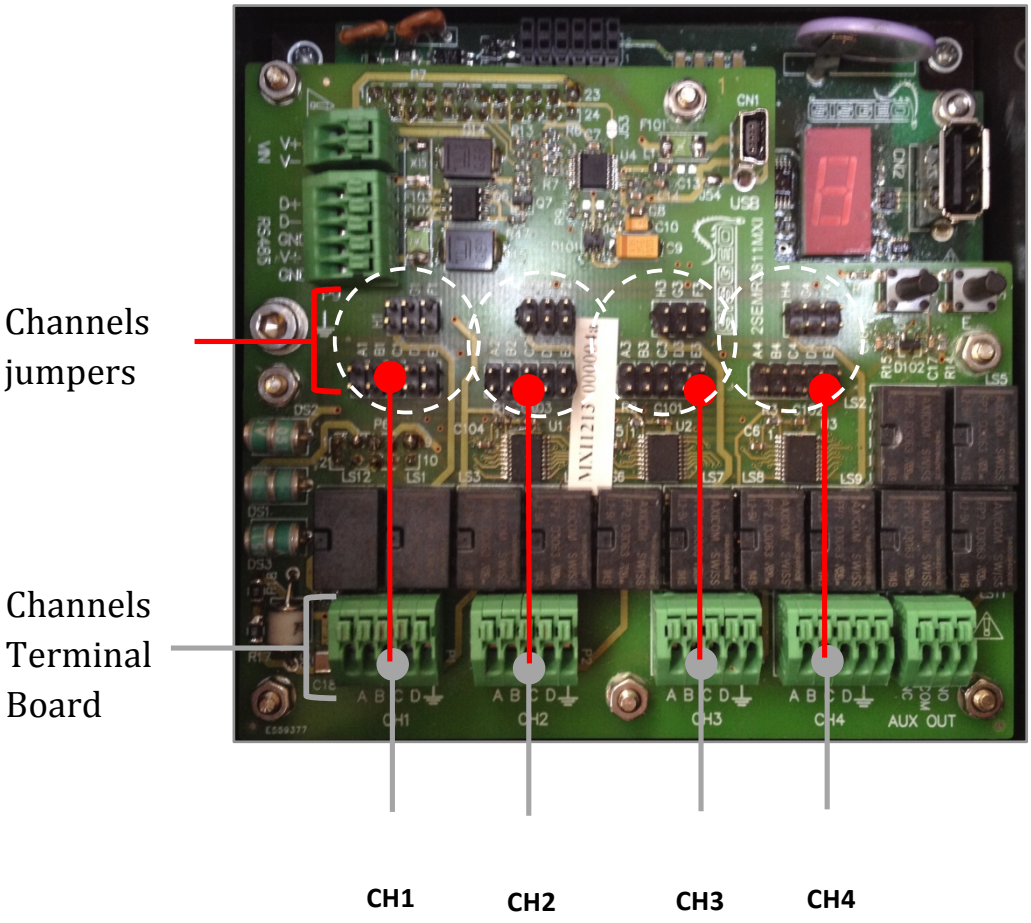

VOLTAGE

24Vdc

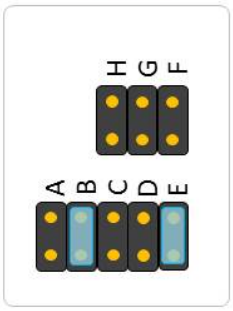

12Vdc

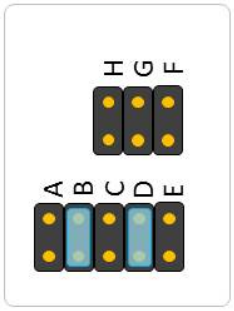

5Vdc

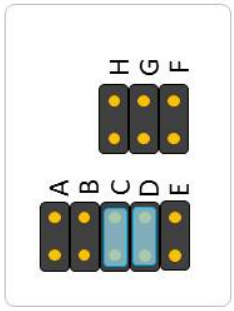

External

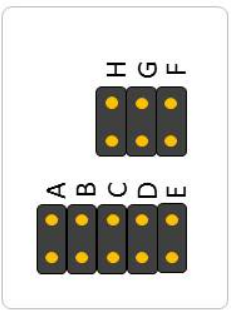

4-20mA CURRENT LOOP 2 WIRES

24Vdc

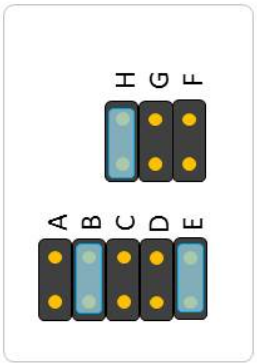

12Vdc

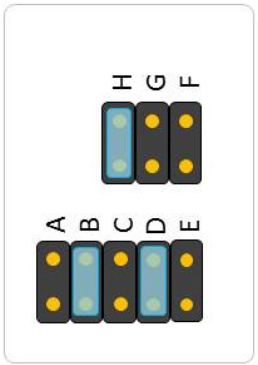

External

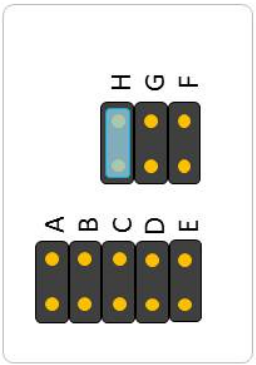

4-20mA TRANSMITTER 3-4 WIRES

24Vdc

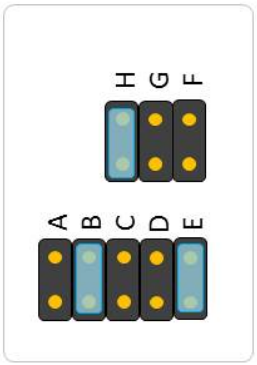

12Vdc

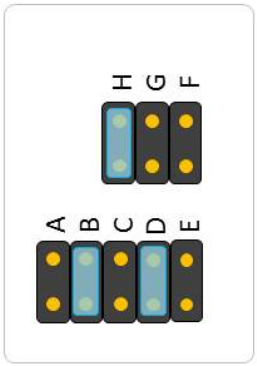

External

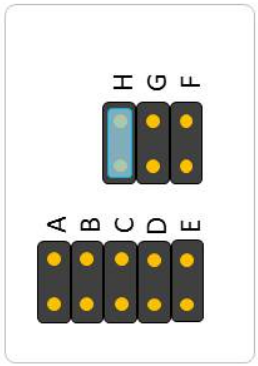

RATIOMETRIC 6 WIRES

only 5Vdc

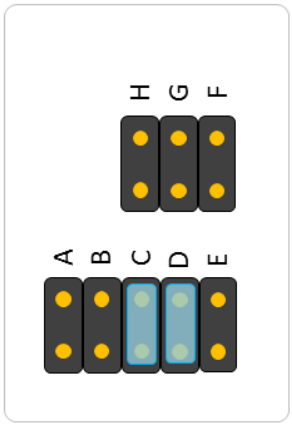

THERMISTOR (NTC)

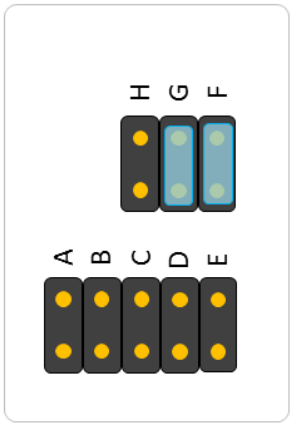

VIBRATING WIRE

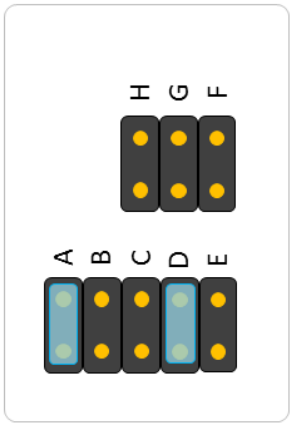

VIBRATING WIRE + THERMISTOR

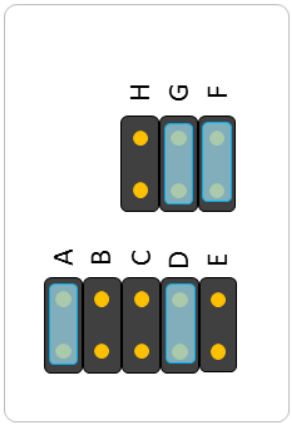

Example

If you have configured the channel **CH1** as **Voltage instrument with 12V Power Supply**, you should insert jumper at position **B1** and **D1**.

If you have configured the channel **CH2** as **4-20mA Current Loop (2 wires) with 24V Power Supply**, you should insert jumper at position **B2**, **E2** and **H2**.

If you have configured the channel **CH3** as **Ratiometric (6 wires) with 5V Power Supply**, you should insert jumper at position **C3** and **D3**. **For this measure type, two channels (CH1+CH2, CH2+Ch3 or CH3+CH4) are necessary.**

If you have configured the channel **CH4** as **Vibrating Wire + Thermistor (NTC)**, you should insert jumper at position **A4**, **D4**, **F4** and **G4**.

ATTENTION: For sensors wiring it is necessary to refer to the "Wiring scheme" on miniOMNIAlog web pages.